

Excellent Integrated System Limited

Stocking Distributor


Click to view price, real time Inventory, Delivery & Lifecycle Information:

Molex Connector Corporation 0638017240

For any questions, you can email us directly: <u>sales@integrated-circuit.com</u>



Information Sheet for Terminal Oiler 63801-7240

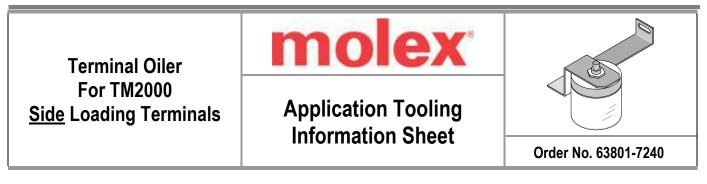

Terminal Oiler

To install a Terminal Oiler (Order No. 63801-7240) to any FineAdjust or Mini-Mac Applicator mounted in the TM3000 Press use the following procedure.

- 1. Open the Front Guard.
- 2. Remove lid assembly from the oiler jar.
- 3. Remove upper oiler nut from lid assembly.
- 4. Place the oiler mounting bracket (63801-7230) over tube and replace upper nut and tighten securely.
- 5. Place lid assembly with mounting bracket on the oiler jar and turn until hand tight. Do not over tighten.
- 6. Mount terminal oiler assembly with bracket on the side of the Plate-Quick Change (63801-7222) installed on the TM-3000 Press. See Figure 1.
- 7. Close the Front Guard.
- 8 Recommended oil:


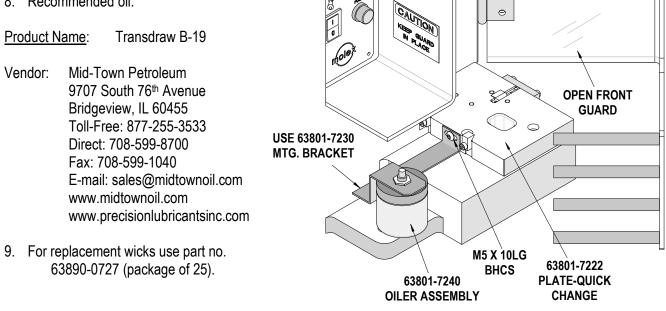


Figure 1



Information Sheet for Terminal Oiler 63801-7240

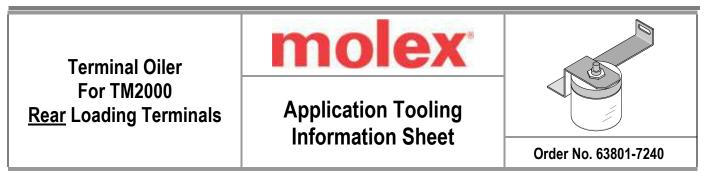


Terminal Oiler

To install a Terminal Oiler (Order No. 63801-7240) to any FineAdjust or Mini-Mac Applicator mounted in the TM3000 Press use the following procedure.

- 1. Remove the Rear Guard (63801-7281).
- 2. Remove lid assembly from the oiler jar.
- 3. Remove upper oiler nut from lid assembly.
- 4. Place the oiler mounting bracket (63801-7230) over tube and replace upper nut and tighten securely.
- 5. Place lid assembly with mounting bracket on the oiler jar and turn until hand tight. Do not over tighten.
- 6. Mount terminal oiler assembly with bracket on the back of the Plate-Quick Change (63801-7222) installed on the
- TM-3000 Press. See Figure 1. 7. Replace the Rear Guard.
- 8. Recommended oil:

Product Name: Transdraw B-19

- Vendor: Mid-Town Petroleum 9707 South 76th Avenue Bridgeview, IL 60455 Toll-Free: 877-255-3533 Direct: 708-599-8700 Fax: 708-599-1040 E-mail: sales@midtownoil.com www.midtownoil.com www.precisionlubricantsinc.com
- 9. For replacement wicks use part no. 63890-0727 (package of 25).

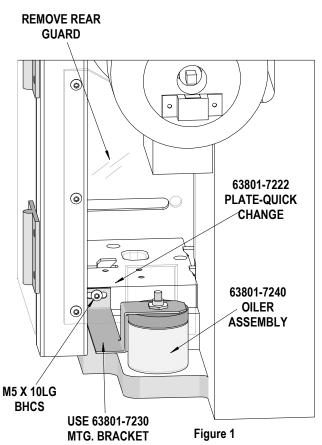


Visit our Web site at http://www.molex.com

Release Date: 05-24-07 Revision Date: 02-06-13 UNCONTROLLED COPY



Information Sheet for Terminal Oiler 63801-7240

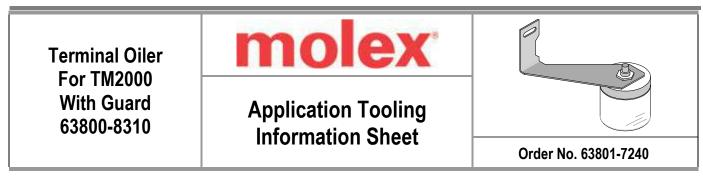


Terminal Oiler

To install a Terminal Oiler (Order No. 63801-7240) to any FineAdjust or Mini-Mac Applicator mounted in the TM2000 Press with Guard (Part No. 63800-8310), use the following procedure.

- 1. Remove the Guard 63800-8310.
- 2. Remove lid assembly from the oiler jar.
- 3. Remove upper oiler nut from lid assembly.
- 4. Place oiler mounting bracket over tube and replace upper nut and tighten securely.
- 5. Place lid assembly with mounting bracket on the oiler jar and turn until hand tight. Do not over tighten.
- Mount terminal oiler assembly with bracket on the frame of the FineAdjust or Mini-Mac Applicator. See Figure 1
- 7. Replace the Guard.
- 8. Recommended oil:

Product Name: Transdraw B-19

Vendor: Mid-Town Petroleum 9707 South 76th Avenue Bridgeview, IL 60455 Toll-Free: 877-255-3533 Direct: 708-599-8700 Fax: 708-599-1040 E-mail: sales@midtownoil.com www.midtownoil.com www.precisionlubricantsinc.com

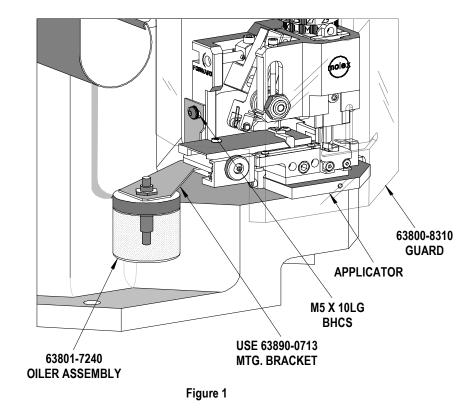

9. For replacement wicks use part no.63890-0727 (package of 25).

Visit our Web site at http://www.molex.com

Release Date: 05-24-07 Revision Date: 02-06-13 UNCONTROLLED COPY



Information Sheet for Terminal Oiler 63801-7240




Terminal Oiler

To install a Terminal Oiler (Order No. 63801-7240) to a TM2000 Press, use the following procedure.

- 1. Remove lid assembly from the oiler jar.
- 2. Remove upper oiler nut from lid assembly.
- 3. Place oiler mtg. bracket over tube and replace upper nut and tighten securely.
- Place lid assembly with mtg. bracket on the oiler jar and turn until hand tight. Do not over tighten.
- Mount terminal oiler assembly with bracket on the guard of the TM2000 Press.
- 6. Recommended lubricant oil:

Product Name: Transdraw B-19


Vendor: Mid-Town Petroleum 9707 South 76th Avenue Bridgeview, IL 60455 Toll-Free: 877-255-3533 Direct: 708-599-8700 Fax: 708-599-1040 E-mail: sales@midtownoil.com www.midtownoil.com www.precisionlubricantsinc.com

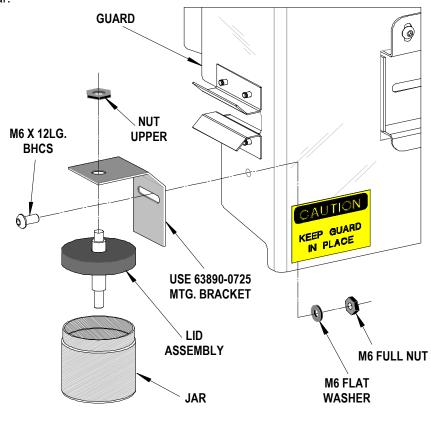

7. For replacement wicks use part no. 63890-0727 (package of 25).



Information Sheet for Terminal Oiler 63801-7240

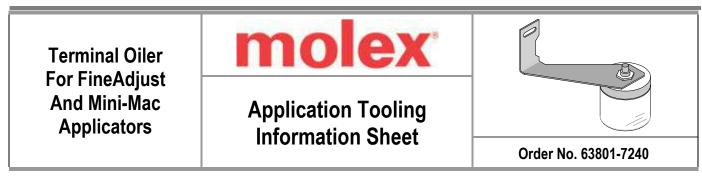


Terminal Oiler

To install a Terminal Oiler (Order No. 63801-7240) to any FineAdjust or Mini-Mac Applicator, use the following procedure.

- 1. Remove lid assembly from the oiler jar.
- 2. Remove upper oiler nut from lid assembly.
- 3. Place oiler mtg. bracket over tube and replace upper nut and tighten securely.
- 4. Place lid assembly with mounting bracket on the oiler jar and turn until hand tight. Do not over tighten.
- 5. Mount terminal oiler assembly with bracket on the frame of the FineAdjust or Mini-Mac Applicator.
- 6. Recommended lubricant oil:

Product Name: Transdraw B-19

- Vendor: Mid-Town Petroleum 9707 South 76th Avenue Bridgeview, IL 60455 Toll-Free: 877-255-3533 Direct: 708-599-8700 Fax: 708-599-1040 E-mail: sales@midtownoil.com www.midtownoil.com www.precisionlubricantsinc.com
- 7. For replacement wicks use part no. 63890-0727 (package of 25).

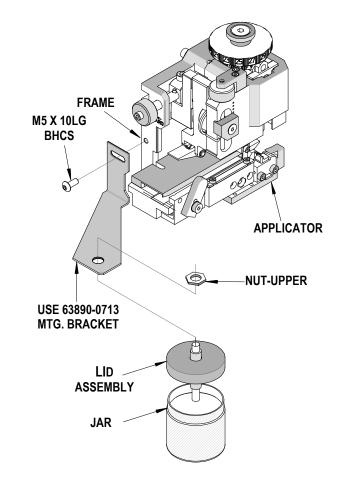



Information Sheet for Terminal Oiler 63801-7240



Terminal Oiler

If your TM42 Presses was produced before 1996, it did not include provisions to mount an oiler.

To install a Terminal Oiler (Order No. 63801-7240) to your press you will need to add a mounting hole. Locate this hole on the left side of the frame, with the front of press facing you, under the track.

Use the following procedure to install the oiler.

- 1. Drill a 4.20mm (.165") diameter x 17.00mm (.62") deep in the location shown in the figure shown.
- 2. Tap a M6-1.0 x 12.00mm (.47") deep.
- 3. Use a M6 BHCS and M6 flat washer to secure oiler onto frame.

OR

- 4. Drill .159" (#21) x .62" deep.
- 5. Tap #10-32 x .62" deep.
- 6. Use #10-32 x 0.50" BHSC.
- 7. Recommended lubricant oil:



- Vendor: Mid-Town Petroleum 9707 South 76th Avenue Bridgeview, IL 60455 Toll-Free: 877-255-3533 Direct: 708-599-8700 Fax: 708-599-1040 E-mail: sales@midtownoil.com www.midtownoil.com www.precisionlubricantsinc.com
- DRILL AND TAP HERE USE 63890-0725 MTG. BRACKET M6 X 10LG. BHCS M6 WASHER 63801-7240 OILER
- 8. For replacement wicks use part no. 63890-0727 (package of 25).