Excellent Integrated System Limited

Stocking Distributor

Click to view price, real time Inventory, Delivery & Lifecycle Information:

<u>Littelfuse</u> <u>LH600301S</u>

For any questions, you can email us directly: sales@integrated-circuit.com





Fuse Blocks

General Information



Fuse Block Selection

The following guidelines should help simplify the selection of proper fuse blocks:

1. Determine the system voltage

Since fuses are selected on the basis of system voltage, fuse blocks are selected to match the voltage rating of the fuse.

2. Determine the design short-circuit current

Available and/or design short-circuit current is an important consideration when determining the class of fuse and fuse blocks to use. If available short-circuit current cannot be determined, or if it will vary with equipment location, select fuses with a 200,000 ampere interrupting rating (A.I.R.) and mating fuse blocks with a withstand rating of 200,000 amperes for maximum safety.

Class H fuse blocks will accept Class H or K5 fuses (which have an interrupting rating of up to 50,000 amperes) and Class R fuses (which have a 200,000 A.I.R.). To prevent the possibility of inserting a fuse with the incorrect interrupting rating, the use of Class R fuse blocks is recommended for use with Class R fuses. Use Class H fuse blocks with Class H or K5 fuses. These fuse blocks are dimensionally the same, but the Class R fuse blocks incorporate a rejection feature which allows only Class R fuses to be inserted.

3. Determine the type and ampere rating of the fuse to be used

In addition to voltage and interrupting rating as discussed above, the fuse ampere rating, opening characteristics (fast acting or time-delay) and size are other important considerations in fuse selection. Once the fuse type is selected, the mating fuse block can be chosen. Fuse blocks are available in 30, 60, 100, 200, 400 and 600 amp ratings, and may be used with a fuse rated at the corresponding amperage rating or below. For example, a fuse block rated at 30 amperes may be used with a fuse rated from 0 to 30 amperes.


4. Determine if NEC, CSA, UL, or other requirements are applicable

If fuse blocks will be installed in equipment to be submitted for agency approval, the requirements should be obtained from the approving agency in advance of fuse and fuse block selection.

5. Select the type of wire termination

A choice of three types of wire termination is available:

- a) Screw* for use with spade lugs or ring terminals.
- b) Screw with Pressure Plate* for use with solid or stranded wire without terminal. Recommended where vibration will be a factor.
- c) Box Lug the most durable. For use with all types of solid wire and Class B and Class C stranded wire. Not for use with welding cable or other rope-stranded conductors.
- * 1/4" Quick Connect terminals rated for up to 20A are available on the Midget and Class CC fuse blocks.

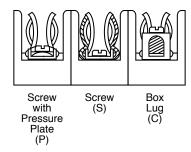

6. Decide on the number of poles in each block


The number of poles for each set of fuses is determined by the characteristics of the circuit. The option to gang individual fuse blocks into long strips will be determined by the available space and by the type of wire being used.

 
7. Determine if fuse clips need to be reinforced


Fuse clips may have a tendency to lose some of their tension over a period of time. This may be prevented by specifying reinforced fuse clips. Reinforced clips are standard on certain fuse blocks (see individual product pages).

Ordering Information

The Littelfuse fuse block part number consists of 6 or 7 components, as shown below and in the individual fuse block data tables.

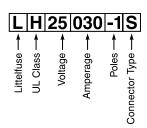



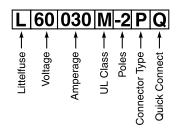

For all Class CC, Midget and 30A Class G Fuse Blocks





Class H/K5 and R Fuse Blocks

250 and 600 Volt



Class H and Class R fuse blocks are dimensionally the same, but Class R blocks incorporate a rejection feature, which only allows Class R fuses to be inserted.

Class H 250V

				onnector Ty		
Amp	No. of	Catalog	(Add Suffix Shown)			Maximum Wire
Rating	Poles	Number	Screw	Pressure	Box	Size
			SCIEW	Plate	Lug	
	1	LH25030-1	S (R)	P (R)	C (R)	S & P = #10 CU
30	2	LH25030-2	S (R)	P (R)	C (R)	C = #6 CU-AL
	3	LH25030-3	S (R)	P (R)	C (R)	
	1	LH25060-1	S (R)		C (R)	S = #10 CU
60	2	LH25060-2	S (R)		C (R)	C = #2 CU-AL
	3	LH25060-3	S (R)		C (R)	
	1	LH25100-1			С	
100	2	LH25100-2			С	#2/0 CU-AL
	3	LH25100-3			С	
	1	LH25200-1			С	
200	3	LH25200-3			С	250 MCM CU-AL
	1	LH25400-1			CR	
400	3	LH25400-3			CR	(2) 350 MCM CU-AL
	1	LH25600-1			C	
600	3	LH25600-3			C	(2) 500 MCM CU-AL

Note: Reinforcing springs standard on all Class H fuseblocks 100 amperes and above.

Class R 250V

Amp	No. of	Catalog		onnector Ty Id Suffix Sho	Maximum Wire	
Rating	Poles	Number	Screw	Pressure Plate	Box Lug	Size
	1	LR25030-1	SR	PR	CR	S & P = #10 CU
30	2	LR25030-2	SR	PR	CR	C = #6 CU-AL
	3	LR25030-3	SR	PR	CR	
	1	LR25060-1			CR	S = #10 CU
60	2	LR25060-2			CR	C = #2 CU-AL
	3	LR25060-3			CR	
	1	LR25100-1			С	
100	2	LR25100-2			C	#2/0 CU-AL
	3	LR25100-3			C	
	1	LR25200-1			С	
200	3	LR25200-3			C	250 MCM CU-AL
	1	LR25400-1			CR	
400	3	LR25400-3			CR	(2) 350 MCM CU-AL
	1	LR25600-1			C	
600	3	LR25600-3			C	(2) 500 MCM CU-AL

Note: Reinforcing springs standard on all Class R fuse blocks.

Features/Benefits

- Class H and Class R fuse blocks feature clip designs to maximize electrical contact and minimize heat rise.
- Reinforcing clips are standard on all Class H fuse blocks rated 100 amp and higher. Note: For reinforcing clips on Class H blocks rated 30-60 amp, add "R" suffix to connector type.
- Reinforcing clips are standard on all Class R fuse blocks

Specifications

Voltage Rating: 250 Volts; 600 Volts
Ampere Ratings: 0 - 600 amperes
Approvals: UL Listed (File No. E14721)
CSA Certified (File No. LR73091)

Recommended Fuses

Class H	Blocks	Class R Blocks		
250V	600V	250V	600V	
NLN	NLS	FLNR/FLNR_ID	FLSR/FLSR_ID	
RLN	RLS	KLNR	KLSR	
		LLNRK	LLSRK/LLSRK_ID	
		TLN	IDSR	

Note: For optional fuse block covers, refer to POWR-Covers section of this catalog.

Class H 600V

Amp	No. of	Catalog	Connector Type (Add Suffix Shown)			Maximum Wire
Rating	Poles	Number	Screw	Pressure Plate	Box Lug	Size
	1	LH60030-1	S (R)	P (R)	C (R)	S & P = #10 CU
30	2	LH60030-2	S (R)	P (R)	C (R)	C = #6 CU-AL
	3	LH60030-3	S (R)	P (R)	C (R)	
	1	LH60060-1			C (R)	S = #10 CU
60	2	LH60060-2			C (R)	C = #2 CU-AL
	3	LH60060-3			C (R)	
	1	LH60100-1			С	
100	2	LH60100-2			С	#2/0 CU-AL
	3	LH60100-3			C	
	1	LH60200-1			С	
200	3	LH60200-3			C	250 MCM CU-AL
	1	LH60400-1			CR	
400	3	LH60400-3			CR	(2) 350 MCM CU-AL
	1	LH60600-1			С	
600	3	LH60600-3			C	(2) 500 MCM CU-AL

Note: Reinforcing springs standard on all Class H fuse blocks 100 amperes and above.

Class R 600V

Amp	No. of	Catalog		onnector Ty Id Suffix Sho	Maximum Wire	
Rating	Poles	Number	Screw	Pressure Plate	Box Lug	Size
	1	LR60030-1	SR	PR	CR	S & P = #10 CU
30	2	LR60030-2	SR	PR	CR	C = #6 CU-AL
	3	LR60030-3	SR	PR	CR	
	1	LR60060-1			CR	S = #10 CU
60	2	LR60060-2			CR	C = #2 CU-AL
	3	LR60060-3			CR	
	1	LR60100-1			С	
100	2	LR60100-2			C	#2/0 CU-AL
	3	LR60100-3			C	
	1	LR60200-1			С	
200	3	LR60200-3			C	250 MCM CU-AL
	1	LR60400-1			CR	
400	3	LR60400-3			CR	(2) 350 MCM CU-AL
	1	LR60600-1			C	
600	3	LR60600-3			C	(2) 500 MCM CU-AL

Note: Reinforcing springs standard on all Class R fuse blocks.







Class H/K5 and R Fuse Blocks

250 Volt


250V 30A

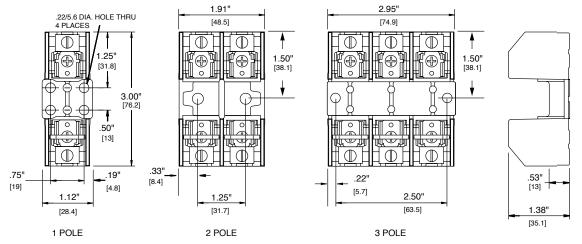

250V 60A

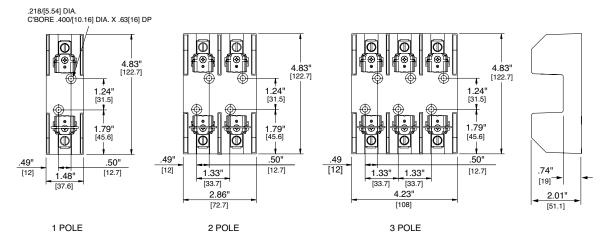

250V 100A

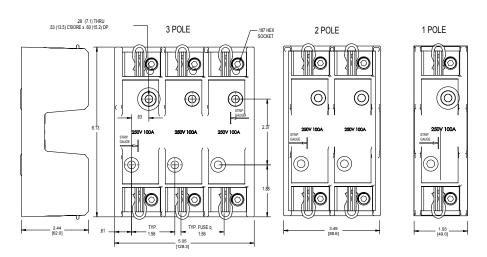







Class H/K5 and R Fuse Blocks


250 Volt

 
250V 200A

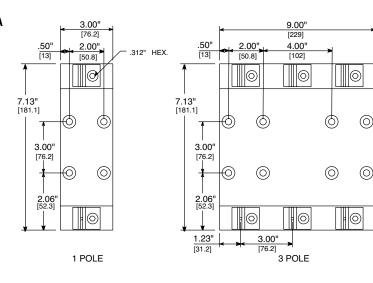




250V 400A

 


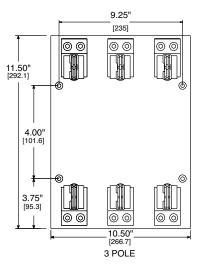



250V 600A

 

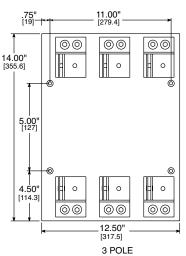









Class H/K5 and R Fuse Blocks

600 Volt


600V 30A

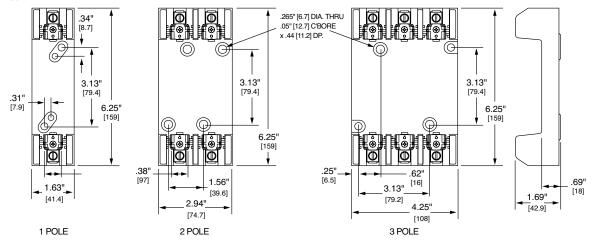

600V 60A

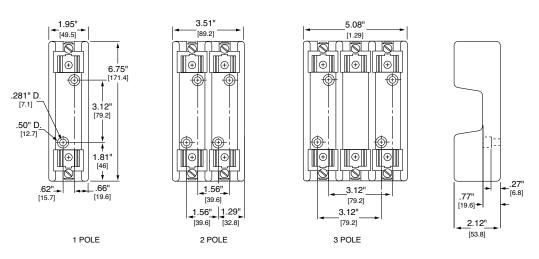

600V 100A

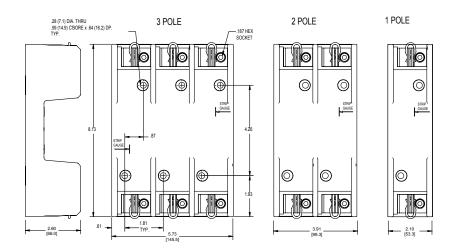







Class H/K5 and R Fuse Blocks


600 Volt

 
600V 200A

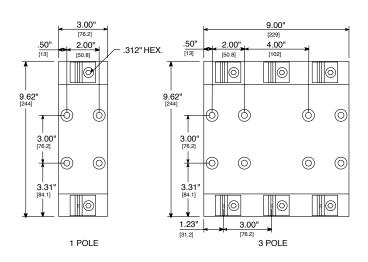



600V 400A

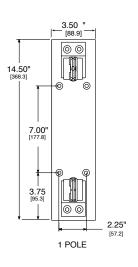

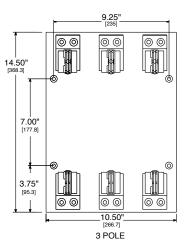



600V 600A

