

Excellent Integrated System Limited

Stocking Distributor

Click to view price, real time Inventory, Delivery & Lifecycle Information:

Maxim Integrated MAX1685EVKIT

For any questions, you can email us directly: sales@integrated-circuit.com



19-1454; Rev 0; 4/99

MAX1685 Evaluation Kit

General Description

The MAX1685 evaluation kit (EV kit) is a fully assembled and tested surface-mount circuit board that contains a pulse-width-modulated (PWM), step-down DC-DC converter. The EV kit provides a +3.33V output voltage from a +3.5V to +14V input source. It delivers up to 1A output current. The MAX1685 features internal MOSFET switches, low dropout voltage (100% duty-cycle operation), and an accurate +1.25V reference.

The MAX1685 EV kit provides low guiescent current, synchronous rectification, and high efficiency (up to 95%) for maximum battery life. Operation at 600kHz allows the use of a tiny surface-mount inductor.

The MAX1685 EV kit can also be used to evaluate the MAX1684, which operates at 300kHz and has slightly higher efficiency than the MAX1685.

Component List

| DESIGNATION | QTY | DESCRIPTION |
|----------------|-----|--|
| C1 | 1 | 22μF, 35V tantalum capacitor AVX TPSE226M035R0300 or Sprague 593D226X0035E2T |
| C2 | 1 | 100μF, 10V, low-ESR tantalum capacitor AVX TPSD107M010R0080, Sprague 594D107X0010C2T, or Sanyo 10TPB100M |
| C3, C4, C5, C9 | 4 | 0.1µF ceramic capacitors |
| C6 | 1 | 0.01µF ceramic capacitor |
| C7 | 1 | 1μF, 16V X7R ceramic capacitor Taiyo Yuden EMK316BJ105KL or TDK C3216X7R1C105M |
| C8 | 0 | Not installed |
| D1 | 1 | 1A Schottky diode Motorola MBRS130LT3, International Rectifier 10BQ040, Nihon EC10QS03, or Nihon EP10QY03 |
| L1 | 1 | 10μH inductor Sumida CDRH6D28-100NC or Sumida CDRH73-100 |
| R1, R2 | 0 | Not installed |
| R3, R4 | 2 | 100kΩ 5% resistors |
| U1 | 1 | MAX1685EEE |
| JU1 | 1 | 3-pin header |
| JU2, JU3 | 2 | 2-pin headers |
| None | 1 | Shunt (JU1) |
| None | 1 | MAX1684/MAX1685 PC board |
| None | 1 | MAX1684/MAX1685 data sheet |

Features

- ♦ +3.5V to +14V Input Voltage Range
- **♦ Fixed or Adjustable Output Voltage**
 - +3.33V (Fixed)
 - +1.25V to VIN (Adjustable)
- **♦** Guaranteed 1A Output Current
- **♦ 100% Duty Cycle in Dropout**
- ♦ 600kHz Fixed-Frequency PWM Operation
- ♦ Internal MOSFET Switch and Synchronous Rectifier
- ♦ 2µA IC Shutdown Current
- **♦ Surface-Mount Components**
- Fully Assembled and Tested

Ordering Information

| PART | TEMP. RANGE | IC PACKAGE |
|--------------|--------------|------------|
| MAX1685EVKIT | 0°C to +70°C | 16-QSOP |

Note: To evaluate the MAX1684, request a MAX1684EEE free sample with the MAX1685 EV kit.

Component Suppliers

| SUPPLIER | PHONE | FAX |
|----------------------------|--------------|--------------|
| AVX | 803-946-0690 | 803-626-3123 |
| Dale-Vishay | 402-564-3131 | 402-563-6418 |
| International Rectifier | 310-322-3331 | 310-322-3332 |
| Motorola | 602-303-5454 | 602-994-6430 |
| Nihon | 661-843-7500 | 661-843-2798 |
| Sanyo | 619-661-6835 | 619-661-1055 |
| Sprague | 603-224-1961 | 603-224-1430 |
| Sumida | 708-956-0666 | 708-956-0702 |
| TDK | 847-390-4373 | 847-390-4428 |
| Taiyo Yuden | 408-573-4150 | 408-573-4159 |

Note: Please indicate that you are using the MAX1685 when contacting these component suppliers.

Maxim Integrated Products 1

For free samples & the latest literature: http://www.maxim-ic.com, or phone 1-800-998-8800. For small orders, phone 1-800-835-8769.



MAX1685 Evaluation Kit

Quick Start

The MAX1685 EV kit is fully assembled and tested. Follow these steps to verify board operation. **Do not turn on the power supply until all connections are completed.**

- 1) Connect a +3.5V to +14V supply to the VIN pad. Connect ground to the GND pad.
- Connect a voltmeter and load (if any) to the VOUT pad.
- 3) Verify that the shunt is across JU1 pins 1 and 2.
- 4) Turn on the power supply and verify that the output is at +3.33V.

Detailed Description

Jumper Selection Shutdown Mode

The MAX1685 EV kit features a shutdown mode that reduces the MAX1685's quiescent current to 2μ A, preserving battery life. The 3-pin header, JU1, selects the shutdown mode (Table 1).

Operating Mode

The MAX1685 operates in one of four modes to optimize performance: a fixed-frequency (PWM) mode switches at a fixed frequency for easy postfiltering; a low-power standby mode; a synchronizable PWM mode that uses an external clock to minimize harmonics; and a normal mode that extends battery life by operating in PWM mode under heavy loads and PFM mode under light loads to reduce power consumption.

Table 1. Jumper JU1 Functions

| SHUNT LOCATION | SHDN PIN | MAX1685 OUTPUT |
|-------------------|------------------|---|
| 1 & 2 | Connected to VIN | MAX1685 enabled, V _{OUT} = +3.33V |
| 2 & 3 | Connected to GND | Shutdown mode, V _{OUT} = 0 |

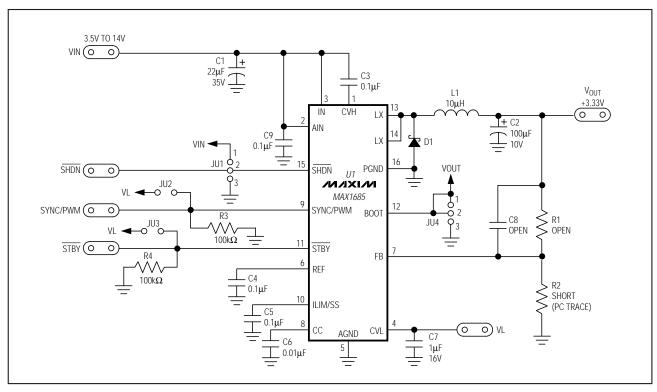


Figure 1. MAX1685 EV Kit Schematic

___ /VI/IXI/M

MAX1685 Evaluation Kit

The EV kit operates at 600kHz switching frequency and allows the use of a tiny inductor. The switching frequency can also be synchronized to an external clock ranging from 360kHz to 700kHz. The 2-pin headers JU2 and JU3 select the operating mode (Tables 2 and 3).

Evaluating Other Output Voltages

The EV kit output is preset to +3.33V. However, the output voltage can also be adjusted between 1.25V and V_{IN} by selecting R1 and R2 values. Select feedback resistor R2 in the $20k\Omega$ to $100k\Omega$ range. R1 is then given by:

R1 = R2 [(VOUT / VFB) - 1]

where $V_{FB} = 1.25V$. Be sure to cut the PC trace shorting the pads of R2 before installing the resistor. Install a

4.7pF capacitor at location C8. For output voltages greater than +5.5V, cut the trace between pins 1 and 2 of JU4, and short pins 2 and 3 of JU4. Refer to the *Detailed Description* section of the MAX1684/MAX1685 data sheet for further details.

Evaluating the MAX1684

This EV kit can also be used to evaluate the MAX1684. Simply replace the MAX1685 with a MAX1684EEE, and change L1 to a 22µH, 1.7A inductor. Refer to the *Inductor Selection* section of the MAX1684/MAX1685 data sheet for more information.

Table 2. Jumper JU2 Functions

| SHUNT LOCATION | SYNC/PWM PIN | OPERATING MODE |
|---------------------|----------------------------|---|
| On | Connected to VL | MAX1685 operates in fixed-frequency mode. |
| | Connected to GND | MAX1685 operates in normal mode. |
| Off (not installed) | Driven from external clock | SYNC/PWM pin is driven by an external clock between 360kHz and 700kHz. |

Table 3. Jumper JU3 Functions

| SHUNT LOCATION | STBY PIN | OPERATING MODE |
|------------------------|------------------|---|
| On | Connected to VL | Operation depends on the JU2 setting. |
| Off (not installed) | Connected to GND | MAX1685 operates in low-power mode. This overrides the JU2 setting. |



MAX1685 Evaluation Kit

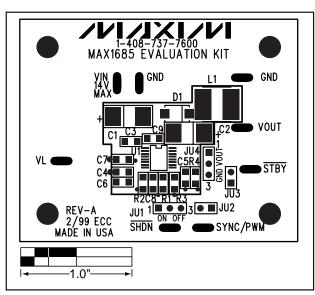


Figure 2. MAX1685 EV Kit Component Placement Guide—Component Side

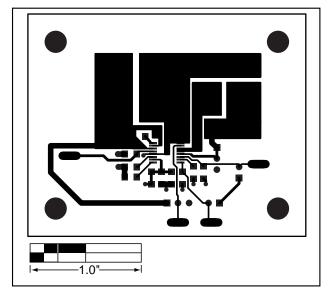


Figure 3. MAX1685 EV Kit PC Board Layout—Component Side

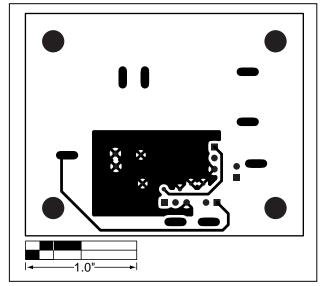


Figure 4. MAX1685 EV Kit PC Board Layout—Solder Side

Maxim cannot assume responsibility for use of any circuitry other than circuitry entirely embodied in a Maxim product. No circuit patent licenses are implied. Maxim reserves the right to change the circuitry and specifications without notice at any time.

______Maxim Integrated Products, 120 San Gabriel Drive, Sunnyvale, CA 94086 408-737-7600