

Excellent Integrated System Limited

Stocking Distributor

Click to view price, real time Inventory, Delivery & Lifecycle Information:

Molex Connector Corporation 0639125900

For any questions, you can email us directly: <u>sales@integrated-circuit.com</u>



Distributor of Molex Connector Corporation: Excellent Integrated System Limited Datasheet of 0639125900 - T2 TERMINATOR ASSY Contact us: sales@integrated-circuit.com Website: www.integrated-circuit.com

T2 Terminator for 1.20mm (.047") Pitch Pico-EZmate™ Wire-to-Board Crimp Terminal

T2 Terminator Tooling	molex	A A A A A A A A A A A A A A A A A A A
	Application Tooling Specification Sheet	
	Specification Sheet	Order No. 63912-5900

FEATURES

- It is ideally suited for mid-volume bench operations
- This terminator can be installed in the TM42 and the TM40 press or Base Unit adapter for 3BF press
- Quick punch removal with the push of a button for fast and easy tooling change
- Track adjustment capabilities in the T2 Terminators for improved control of the bell mouth size and cutoff tab length
- T2 Terminator has standardized tooling with the Molex FineAdjust Applicator which will reduce your inventory requirements

SCOPE

Products: 1.20mm (0.47") Pitch Pico-EZmate™ Wire-to-Board Crimp Terminal, 28-30 AWG.


Terminal	Terminal Order No.	Wire Size		Insulation IPC/WHMA-A620 (1)		Diameter Terminal (2)		Strip Length	
Series No.		AWG	mm²	mm	In.	mm	In.	mm	ln.
¥ 70170	78172-0410	28-30 0.08-0.05		-0.05 0.50-0.70	.020028	0.50-0.70	.020028	0.90-1.30	.035051
×78172	78172-0411		0.08-0.05						

× Oiler is required for this applicator due to gold plating on terminal.

Oiler order number 63801-7240 (See Part Number 63801-7240 on Molex Web)

- (1) To achieve optimum IPC-A620 insulation crimps, use this insulation OD range.
- (2) Overall insulation OD specification for terminal.

DEFINITION OF TERMS

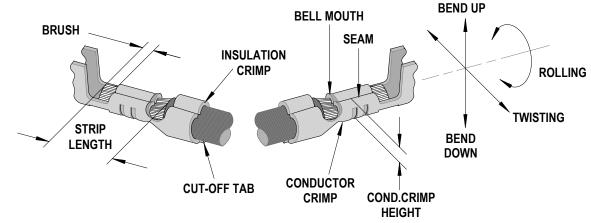

The above terminal drawing is a generic terminal representation. It is not an image of a terminal listed in the scope.

Doc No: ATS-639125900 Revision: A Release Date: 10-03-14 Revision Date: 10-03-14 UNCONTROLLED COPY



CRIMP SPECIFICATION

	Terminal Series No.	Bell n	nouth	Cut-off Tab	Maximum	Conductor Brush	
		mm	ln.	mm	ln.	mm	ln.
	78172	0.05-0.15	.002006	0.05	.002	0.15-0.70	.006028

Terminal	Bend up Bend down		Twist Roll		Punch Width mm (Ref)				Seam	
	Series No. Degree		Degree		Conductor		Insulation		Seam shall not be	
Series No.					mm	In	mm	In	open and no wire allowed	
78172	3	3	2	3	0.80	.031	0.80	.031	out of the crimping area	

After crimping, the conductor profile should measure the following.

	Wire	Size		Conducto	or Crimp		Pull F	orce
Terminal Series No.	AWG	mm²	Crimp	Height	Crimp Wi	Minimum		
	AWG		mm	In.	mm	In.	Ν	Lb.
78172	28	0.08	0.44-0.48	.017019	0.85	.033	10.0	2.25
/81/2	30	0.05	0.40-0.44	.015017	0.85	.033	5.0	1.12

	Wire	Size	Insulation					
Terminal Order No.	AWG	mm²	Crimp	Height	Crimp Width (Ref.)			
	AWG		mm	In.	mm	In.		
78172-0410	28	0.08	0.73-0.77	.028030	0.85	.033		
	30	0.05	0.71-0.75	.027029	0.85	.033		
78172-0411	28	0.08	0.77-0.81	.030032	0.85	.033		
	30	0.05	0.75-0.79	.029031	0.85	.033		

Tool Qualification Notes:

- 1. Pull Force should be measured with no influence from the insulation crimp.
- 2. The above specifications are guidelines to an optimum crimp.




PARTS LIST

		T2 Terminato	r 63912-5900	
ltem	Order No	Engineering No.	Description	Quantity
		Perishabl	e Tooling	
	63912-5970	63912-5970	Tool Kit (All "Y" Items)	REF
1	63457-0046	63457-0046	Conductor Punch	1 Y
2	63455-0059	63455-0059	Conductor Anvil	1 Y
3	63454-0082	63454-0082	Insulation Punch	1 Y
4	63456-0054	63456-0054	Insulation Anvil	1 Y
5	63443-0003	63443-0003	Front Cut-Off Plunger	1 Y
6	63443-0012	63443-0012	Front Plunger Retainer	1 Y
		Other Cor	nponents	
7	11-24-1067	4996-4	Cut-off Plunger Spring	1
8	63443-0009	63443-0009	Scrap Chute	1
9	63443-0025	63443-0025	Key	1
10	63443-0085	63443-0085	Wire Stop L-Bracket	1
11	63443-0090	63443-0090	Wire Stop	1
12	63443-2217	63443-2217	Coarse Spacer (17.00mm)	2
13	63443-2314	63443-2314	Fine Spacer (3.70mm)	1
14	63443-2805	63443-2805	Front Plunger Striker	1
15	63443-2902	63443-2902	Hold Down Plunger	1
16	63443-6017	63443-6017	Rear Cover	1
17	63443-7201	63443-7201	Spring Cover	1
18	63600-0021	63600-0021	Compression Spring	1
19	63600-2972	63600-2972	Collar	2
20	63890-0058	63890-0058	Height Spacer	1
21	63901-1301	63901-1301	Feed Guide	1
		Fra	me	
22	63800-8800	63800-8800	T2 Terminator	1
		Hard	ware	1
23	N/A	N/A	M3 by 6 Long SHCS	2**
24	N/A	N/A	M3 by 6 Long FHCS	1**
25	N/A	N/A	M4 by 6 Long SHCS	2**
26	N/A	N/A	M4 by 12 Long BHCS	2**
27	N/A	N/A	M4 by 14 Long SHCS	2**
28	N/A	N/A	M4 by 30 Long SHCS	2**
29	N/A	N/A	M4 by 50 Long SHCS	2**
30	N/A	N/A	M5 by 12 Long SHCS	1**
31	N/A	N/A	#10-32 by 3/8"Long BHCS	1**
** Ava	ailable from an	industrial supply co	mpany such as MSC (1-800-6	645-7270).



Distributor of Molex Connector Corporation: Excellent Integrated System Limited Datasheet of 0639125900 - T2 TERMINATOR ASSY Contact us: sales@integrated-circuit.com Website: www.integrated-circuit.com

T2 Terminator for 1.20mm (.047") Pitch Pico-EZmate™ Wire-to-Board Crimp Terminal

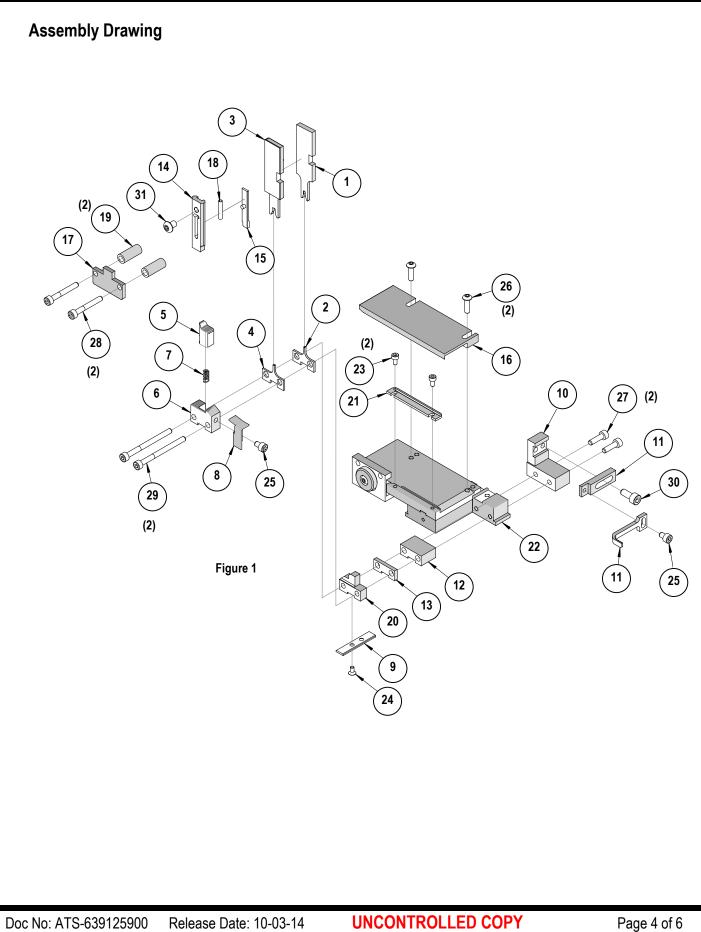




NOTES

Depending on the press vintage a feed finger assembly is supplied with the T2 Terminator.

- 1. To remove the existing feed finger assembly loosens the M4 x 10 mm set screw in the feed lever.
- 2. Select T2 Feed finger assembly from Terminator box.
- 3. Insert a screwdriver into the slot behind the feed lever and force the feed arm spring to the right.
- 4. Slide the T2 feed finger shaft for TM42 (11-40-5307) or (11-40-0123) for TM40 /Base Unit into the feed lever and to the left of the feed arm spring.
- 5. Release the feed arm spring.
- 6. Position feed finger for selected product. (Refer to Figure 5.1 in the T2 Manual).

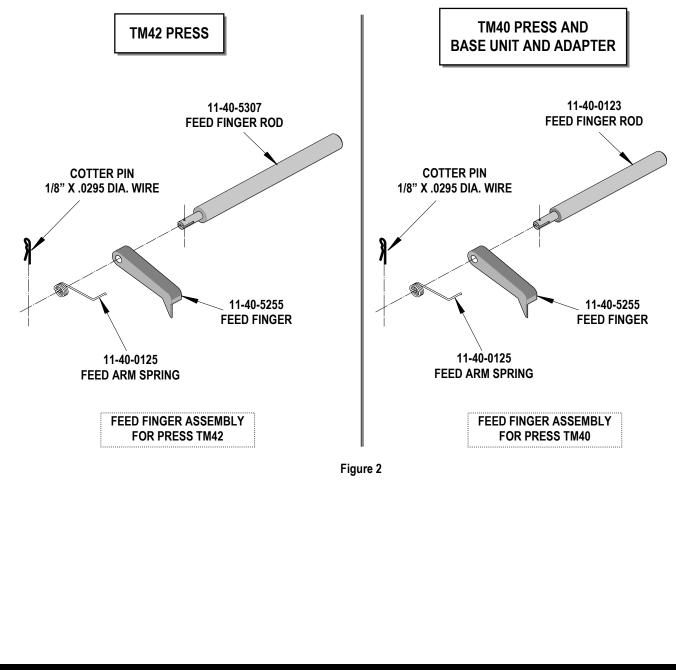

Doc No: ATS-639125900 Revision: A



NOTES

- 1. Molex recommends an extra perishable tooling kit be maintained at your facility.
- 2. Verify tooling alignment by manually cycling the press before crimping under power. Check that all screws are tight.
- 3. Slugs, Terminals, Dirt and Oil should be kept clear of work area.
- 4. This Terminator should be only used in a Molex TM42, TM40, or 3BF Press with a Base Unit adaptor.
- 5. Wear safety glasses at all times.
- 6. For recommended maintenance refer to the TM40, TM42 Manual.

CAUTION: To prevent injury never operate this Terminator without the guards supplied with the press or in place. Reference the TM42 press manufacturer's instruction manual.

CAUTION: Molex crimp specifications are valid only when used with Molex terminals, applicators and tooling.

Visit our Web site at http://www.molex.com