

Excellent Integrated System Limited

Stocking Distributor

Click to view price, real time Inventory, Delivery & Lifecycle Information:

Pulse Electronics Corporation P0583NL

For any questions, you can email us directly: <u>sales@integrated-circuit.com</u>



Distributor of Pulse Electronics Corporation: Excellent Integrated System Limited Datasheet of P0583NL - XFRMR CURR SENSE 5MH 50:1:1 T/H Contact us: sales@integrated-circuit.com Website: www.integrated-circuit.com

THT Current Sense Transformers







- UL/C-UL recognized components
- 3000Vrms gate to drive winding test
- Useful operating frequency from 50kHz to 500 kHz
- Most popular winding configurations

Electrical Specifications @ 25°C - Operating Temperature -40°C to +130°C							
Part ⁶ Number	Turns Ratio	Primary Inductance (1-10) (mH MIN)	DCR Pri (1-10) (Ω MAX)	DCR Sec1 (3-7) (mΩ ±15%)	DCR Sec2 (4-8) (mΩ ±15%)	Hipot (Pri-Sec) (Vrms)	
P0581NL	200:1:1	76	2.8	1.7	1.7	3000	
P0582NL	100:1:1	19	1.4	1.7	1.7	3000	
P0583NL	50:1:1	5	0.7	1.7	1.7	3000	

Additional Specifications							
		Referer	Calculation Data				
Part Number	RT	lpk (Amps)	Droop (%)	Max Flux Density	Kb	Req (mΩ)	
P0581NL	200	34	1.00	2000	17.12	.9	
P0582NL	100	35	1.98	2000	68.49	.8	
P0583NL	15	36	1.19	2000	273.97	.75	

Notes:

- 1. These current sense transformers have two one turn primaries that can be used in parallel. The listed current ratings are for parallel connection.
- 2. The reference values are for an application using the termination resistor (Rt) and operating with unipolar waveform at 100kHz, 40% duty cycle. The estimated temperature rise is 55°C.
- 3. The peak flux density should remain below 2100 Gauss to ensure that the core does not saturate. Use the following formula to calculate the peak flux density: Bpk = Kb * lpk * Rt * don/(Ff * freq. in kHz) where: Rt is the terminating resistor in the application and the Ff is 1 for unipolar waveform and 2 for bipolar waveform.
- 4. To calculate the droop: Droop Exponent (D) = Rt * don/(Lpri in mH * Freq. in kHz %Droop = $(1-e^{-D})$ * 100


- 5. The temperature rise of the component is calculated based on the total core loss and copper loss:
 - A. To calculate total copper loss (W): P(cu) = lpk^{2*} Req * Ff * don where Ff is 1 for unipolar waveform and 2 for bipolar waveform
 - B. To calculate total core loss (W): P (core) = $0.000073 * (Freq. in kHz)^{1.67} * (Bop in kG)^{2.552}$ where: Bop in kG = Kb * lpk * Rt * don/(2000 * Freq. in kHz)
 - C. To calculate temperature rise: Temperature Rise (C) = 60.18 * (Core Loss (W) + Copper Loss (W)).⁸³³





Distributor of Pulse Electronics Corporation: Excellent Integrated System Limited Datasheet of P0583NL - XFRMR CURR SENSE 5MH 50:1:1 T/H Contact us: sales@integrated-circuit.com Website: www.integrated-circuit.com

THT Current Sense Transformers

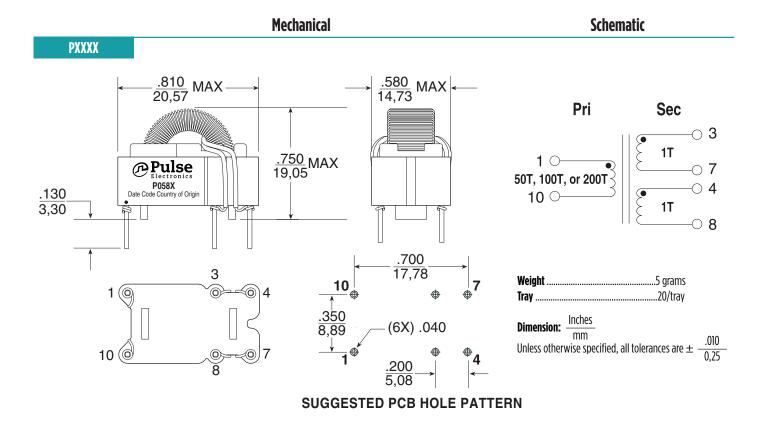

For More Information

Pulse Worldwide Headquarters 12220 World Trade Drive San Diego, CA 92128 U.S.A.	Pulse Europe Einsteinstrasse 1 D-71083 Herren- berg Germany	Pulse China Headquarters B402, Shenzhen Academy of Aerospace Technol- ogy Bldg. 10th Kejinan Road High-Tech Zone Nanshan District Shenzen. PR China	Pulse North China Room 2704/2705 Super Ocean Finance Ctr. 2067 Yan An Road West Shanghai 200336 China	Pulse South Asia 135 Joo Seng Road #03-02 PM Industrial Bldg. Singapore 368363 Tel: 65 6287 8998	Pulse North Asia 3F, No. 198 Zhongyuan Road Zhongli City Taoyuan County 320 Taiwan R. O. C. Tel: 886 3 4356768 Fax: 886 3 4356823
Tel: 858 674 8100	Tel: 49 7032 7806	518057	UIIIId	Fax: 65 6287 8998	(Pulse)

Performance warranty of products offered on this data sheet is limited to the parameters specified. Data is subject to change without notice. Other brand and product names mentioned herein may be trademarks or registered trademarks of their respective owners. © Copyright, 2015. Pulse Electronics, Inc. All rights reserved.

2

pulseelectronics.com

P516.C (06/15)

