

# **Excellent Integrated System Limited**

Stocking Distributor

Click to view price, real time Inventory, Delivery & Lifecycle Information:

Molex Connector Corporation 0622018624

For any questions, you can email us directly: <u>sales@integrated-circuit.com</u>




**Distributor of Molex Connector Corporation: Excellent Integrated System Limited** Datasheet of 0622018624 - TOOL 15 ROW 10 COLUMN D-CARD Contact us: sales@integrated-circuit.com Website: www.integrated-circuit.com

I-Trac<sup>™</sup> Daughtercard Press-In Tool



I-Trac<sup>™</sup> Daughtercard Module Installation Application Tooling Specification Press-In Tool Order No. 62201-8624

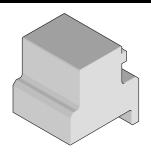

# FEATURES

- Lip provided for positive alignment to connector assembly.
- Tool provides uniform distribution of press force across entire pin array.
- May be used as a stand-alone tool or mounted in an optional holder with other Molex press-in tools.

### SCOPE

<u>Products</u>: I-Trac<sup>™</sup> Daughtercard Signal Module Assembly, 76040 Series 10 Column Assemblies. See Product List below for specific part numbers.

### **Product List**

The following is a partial list of the product order numbers and their specifications this tool is designed to run. Updates to this list are available on <u>www.molex.com</u>.

76040 Series number							
Guide Style	Columns	Assembly Order Number					
Open	10	76040-0010	76040-1010				
Left	10	76040-2010	76040-2110	76040-2210	76040-2310	76040-2410	
		76040-2510	76040-2610	76040-2710	76040-2810		
		76040-3010	76040-3110	76040-3210	76040-3310	76040-3410	
		76040-3510	76040-3610	76040-3710	76040-3810		
Right	10	76040-4010	76040-4110	76040-4210	76040-4310	76040-4410	
		76040-4510	76040-4610	76040-4710	76040-4810		
		76040-5010	76040-5110	76040-5210	76040-5310	76040-5410	
		76040-5510	76040-5610	76040-5710	76040-5810		




**Distributor of Molex Connector Corporation: Excellent Integrated System Limited** Datasheet of 0622018624 - TOOL 15 ROW 10 COLUMN D-CARD Contact us: sales@integrated-circuit.com Website: www.integrated-circuit.com

I-Trac<sup>™</sup> Daughtercard Press-In Tool

# **Tool Setup**

Depending on the number of connectors to be installed and/or the press used, this tool can be used alone or with a group of press-in tools, mounted in a 62201-95XX rail (ordered separately). See Figure 1.

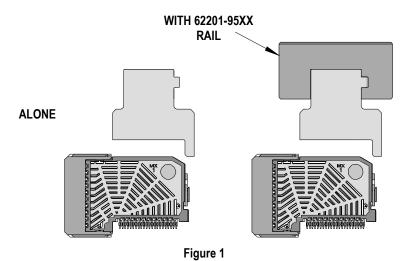

# **Tool Installation**

The 62201-95XX rail is available in a variety of lengths to accommodate multiple press-in tools.

Rail Part Number	Rail Overall Length
62201-9501	24mm (0.94 in)
62201-9502	72mm (2.83 in)
62201-9503	156mm (6.14 in)
62201-9504	216mm (8.50 in)
62201-9509	254mm (10.0 in)
62201-9511	305mm (12.0 in)

Reference: This Press-In Tool is 36.9mm (14.53 in.) long.

### Printed Circuit Board (PCB) Support

The I-Trac<sup>™</sup> connectors require up to 1.81kg (4 lb)) of force per pin to press into the PCB. To prevent excessive PCB flexure and/or damage to the PCB, a support plate is strongly recommended directly beneath the connector hole pattern.

Due to the custom nature of every application, Molex does not offer any PCB support plate. The customer must furnish their own support plate.

When creating the PCB support plate, remember to allow clearance for the connector pins as they pass through the PCB thickness.



I-Trac<sup>™</sup> Daughtercard Press-In Tool


# **Press Equipment Recommendations**

Many types of presses can be used to install I-Trac<sup>™</sup> connectors, but to assure consistent connector installation Molex recommends the following press criteria:

- 1. The capability to detect force variations as low as 4.5kg (10 lb) during the press-in cycle; excessive force measurements should stop the press-in cycle.
- 2. The rate of pressing can be regulated as low as 0.13mm (0.005 in) per second.
- 3. Press stroke control to within 0.25mm (0.010 in).
- 4. Total press stroke must be at least 19mm (0.75 in).
- 5. For statistical purposes, automatic collection of force and distance data.

### **Tool Operation**

- 1. Carefully insert, by hand, the Daughtercard module(s) into the PCB hole pattern.
- 2. Place the application tool on top of the Daughtercard module with the back guide surface of the tool against the back of the Daughtercard module. See Figure 2.

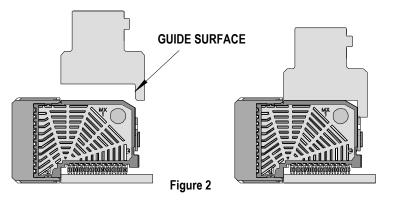

3. Using the application tool and an appropriate press, seat the Daughtercard module until there is less than 0.10mm (.004 in) clearance between the bottom of the plastic housing and the surface of the PCB. See Figure 3.

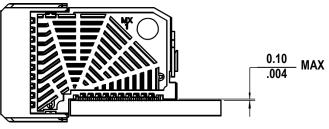


Figure 3 (Daughtercard shown; same dimensions for RAM)

There should be no broken stand-offs along the perimeter of the part (an indication of over-pressing).



I-Trac<sup>™</sup> Daughtercard Press-In Tool

**CAUTION**: To prevent injury, never operate any press without the guards in place. Refer to the press manufacturer's instruction manual.

**CAUTION**: Molex application tooling specifications are valid only when used with Molex connectors and tooling.

#### **Contact Information**

For more information on Molex application tooling please contact Molex at 1-800-786-6539.

Americas Headquarters Lisle, Illinois 60532 U.S.A. 1-800-78MOLEX amerinfo@molex.com Far East North Headquarters Yamato, Kanagawa, Japan 81-462-65-2324 feninfo@molex.com Far East South Headquarters Jurong, Singapore 65-6-268-6868 fesinfo@molex.com European Headquarters Munich, Germany 49-89-413092-0 eurinfo@molex.com

**Corporate Headquarters** 

2222 Wellington Ct. Lisle, IL 60532 U.S.A. 630-969-4550 Fax: 630-969-1352

Visit our Web site at http://www.molex.com

Doc No: ATS-622018624 Revision: C Release Date: 09-27-06 Revision Date: 02-18-09 **UNCONTROLLED COPY**