

Excellent Integrated System Limited


Stocking Distributor

Click to view price, real time Inventory, Delivery & Lifecycle Information:

[Crystek Corporation](#)
[CS-TM-MSC](#)


For any questions, you can email us directly:

sales@integrated-circuit.com

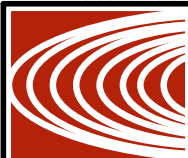

CRYSTEK
MICROWAVE
A DIVISION OF CRYSTEK CORPORATION

TNCA Plug, Solder Clamp for Semflex HP190 Cable

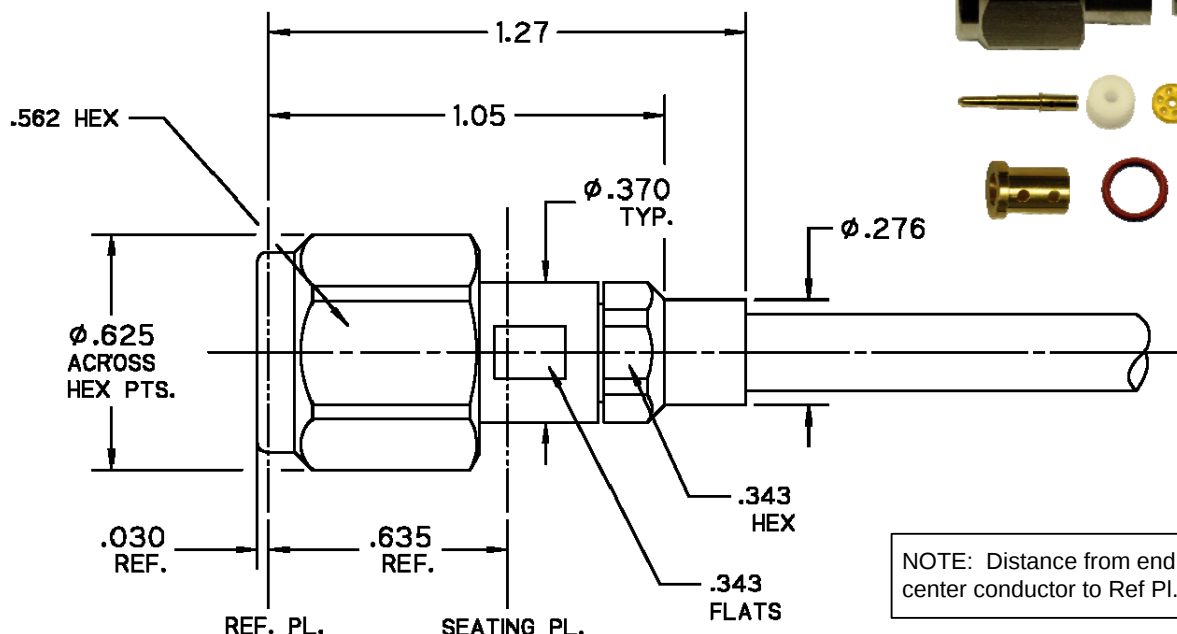

NOTE: Distance from end of cable center conductor to Ref Pl. is 0.455

NOTES:

1.0 Materials


- 1.1 Body, Coupling, and Clamp Nuts: Steel. Corrosion Resistant per ASTM-A582. UNS No. S30300.
- 1.2 Center Conductor: Beryllium Copper per ASTM-B196. UNS C17300.
- 1.3 Solder Ferrule: Brass per ASTM-B16. UNS C36000.
- 1.4 Lock Ring: Beryllium Copper per ASTM-B197. UNS C17200.
- 1.5 Gasket and O-Ring: Silicone Rubber per A-A-59588.
- 1.6 Insulator: PTFE Fluorocarbon per ASTM-D1710.
- 1.7 Dielectric Beads: Polyetherimide Thermoplastic (ULTEM 1000) per ASTM-D5205.

2.0 Finishes

- 2.1 Center Contact and Solder Ferrule: Gold Plate per ASTM-B488 50 Microinches Min. thickness over Electrolytic Nickel Plate per ASTM-B689 50 Microinches Min. thickness.
- 2.2 Body, Coupling, and Clamp Nuts: Passivated per SAE-AMS-2700.
- 2.3 Gasket, O-Ring, Lock Ring, and Dielectrics: None.


3.0 Interface: TNCA Plug per MIL-STD-348. Figure 313-3.



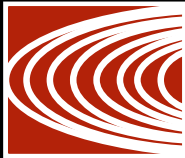


CRYSTEK
MICROWAVE
A DIVISION OF CRYSTEK CORPORATION

TNCA Plug, Solder Clamp for Semflex HP190 Cable

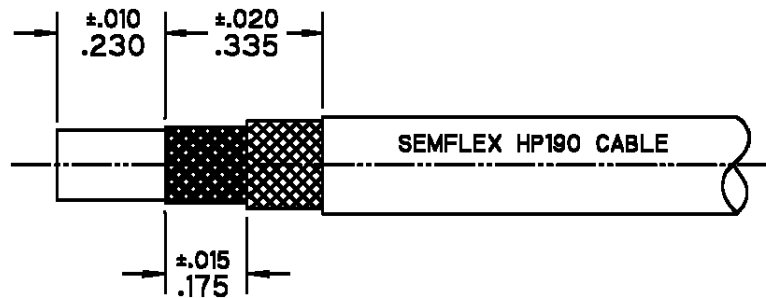


Step 1

1.1 Trim Cable to expose dielectric core and braids as shown.

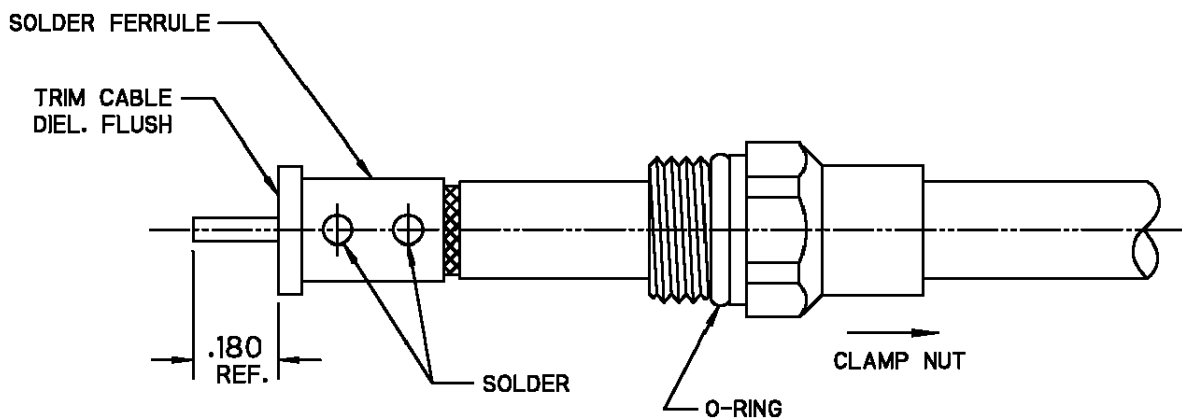

- 2.1 Slide clamp nut over cable as shown.
2.2 Insert cable into solder ferrule until forward braid seats then solder both cable braids where shown.
2.3 Trim cable dielectric flush to solder ferrule.

Step 2

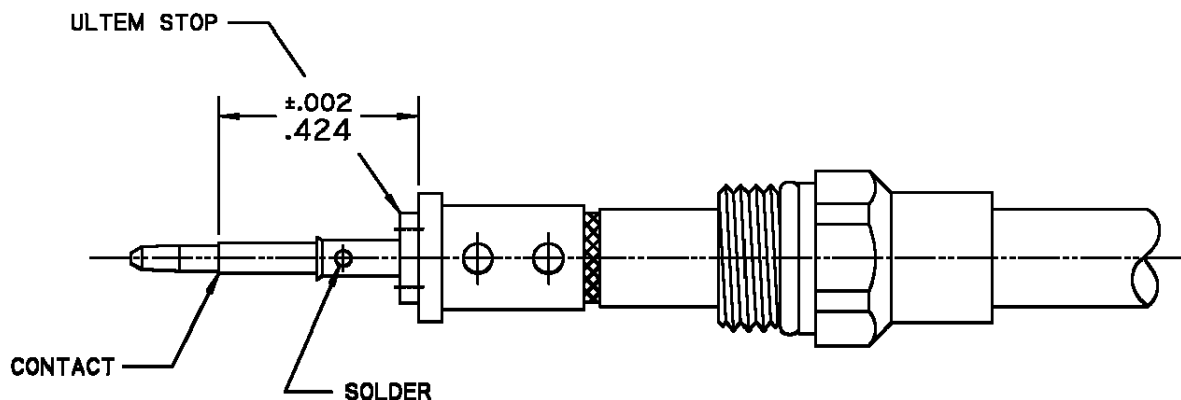


- 3.1 Slide Ultem dielectric stop over cable center conductor against solder ferrule as shown.
3.2 Solder contact flush against stop to dimension shown.

Step 3




CRYSTEK
CORPORATION

12730 COMMONWEALTH DRIVE • FORT MYERS, FLORIDA 33913
PHONE: 239-561-3311 • 800-237-3061
FAX: 239-561-1025 • WWW.CRYSTEK.COM

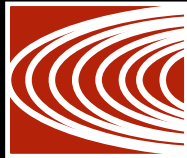


CRYSTEK
MICROWAVE
A DIVISION OF CRYSTEK CORPORATION

TNCA Plug, Solder Clamp for Semflex HP190 Cable

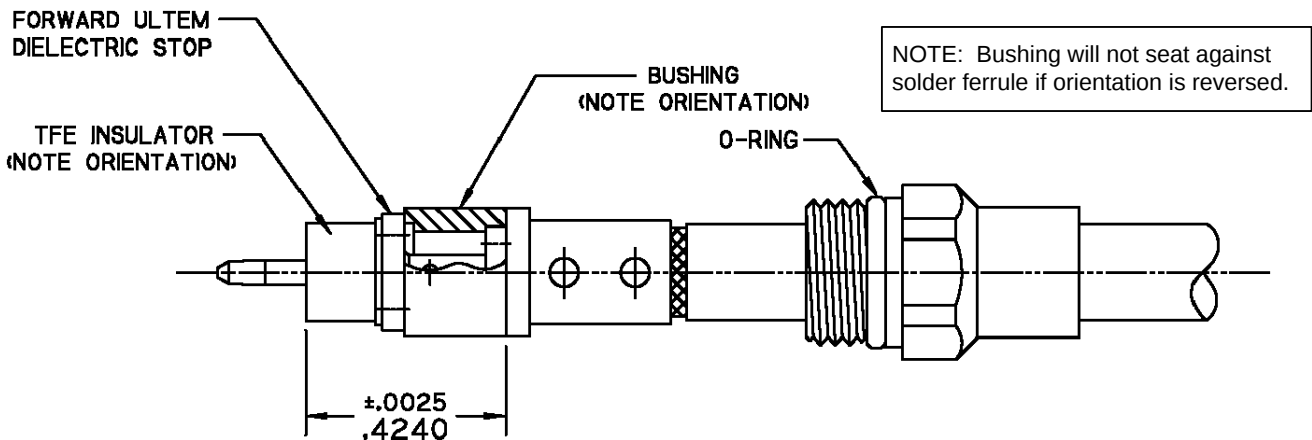

4.1 Slide bushing. Forward Ultem stop and forward teflon insulator over contact as shown. (Note: orient bushing with deeper smaller diameter c'bore toward solder ferrule. Orient forward TFE insulator with shoulder toward dielectric stop.)

Step 4

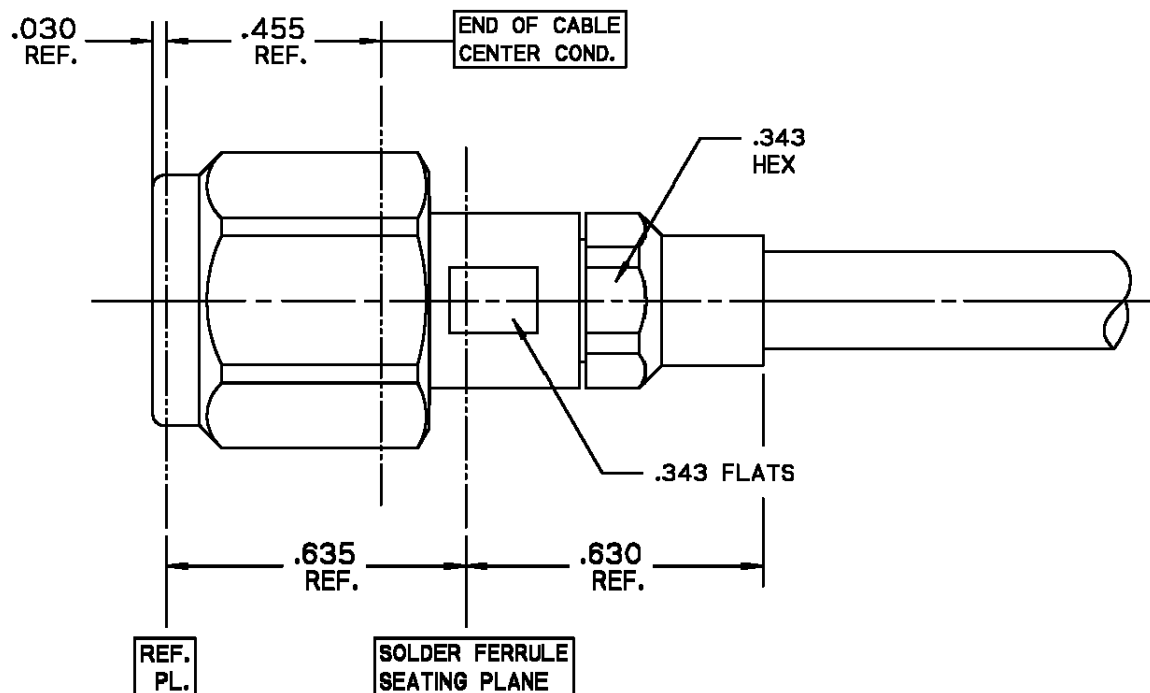

5.1 Insert cable/contact sub-assembly into connector until seated and tighten clamp nut to 35-45 in-lbs.

Step 5

Product Control:

Crystek Part Number:	CS-TM-MSC	Release Date:	04-Jan-11
Revision Level:	A	Responsible:	K. Piotrowicz

Page 3 of 3



CRYSTEK
CORPORATION

12730 COMMONWEALTH DRIVE • FORT MYERS, FLORIDA 33913
PHONE: 239-561-3311 • 800-237-3061
FAX: 239-561-1025 • WWW.CRYSTEK.COM