

Excellent Integrated System Limited

Stocking Distributor

Click to view price, real time Inventory, Delivery & Lifecycle Information:

[PanaVise](#)
[75107-309](#)

For any questions, you can email us directly:

sales@integrated-circuit.com

INDASH by PANAVISE®

75107-309

Page 1 of 1

MOUNTING LOCATION:

Above Right & Left of radio JURL

TOOLS REQUIRED:

7mm Socket Driver
 Phillips Screwdriver, Cutting Tool

PARTS INCLUDED:

(1)-S7-1999, (1)-S7-1946 Top (75002)
 (1)-E- 8/32"x1.0" Needle Pt. Screw, Phillips
 (2)-A-8/32"x9/16" Needle Pt. Screw
 (2)-O- 8/32" Acorn Nuts, Tape

**CELL PHONE & MEDIA MOUNT
 INSTALLATION INSTRUCTIONS**

PART#: 75107-309

MFG: FORD

**MODELS & YEARS:
 F-150 2009-2012 (ALL)**

**** ADVISEMENT ****

Read instructions completely prior to starting installation. All InDash Mounts are designed so that after installation, phone is facing normal driver position for left-hand drive vehicles. This mount is not designed to be used in foreign countries with right-hand drive vehicles. Use extreme care when working around the plastic components on the dash. Excess force, can cause breakage of the plastic components.

STEP #1: Lift off the rubber pad on floor of cubby above CD/Radio/Display. Lift up on the front of the pad and pull out towards you.

STEP #2: Install the Protective Tape piece on the bottom of the larger piece of the mount where the dash touches the radio bezel, and trim with scissors. See Picture.


STEP #3: With 7mm socket driver, remove either the left or right side screw that was under pad. Place Indash by PanaVise Mount over screw hole. (Left side mounting uses the right side slotted screw hole, and Right side mounting uses the right side slotted screw hole) Install 1.0" long screw supplied. Make sure the joggle on the mount fits up against the radio bezel edge.

STEP #3: Install the additional (2) 9/16" long screws into the other screw holes. *NOTE: The only hole that will not be used is the one directly in front of the hole you installed the 1.0" long screw into)*

STEP #4: Place the Pad back in place, as it will not go all the way in. You will need to cut some of the pad edge away to allow the rubber pad to fit in as best as it can.

STEP #5: Install the Upper mount part #75002 either in the UP(North) or the DOWN(South) direction, depending on your preferences. *Note: The top has (4) installation holes it can use to angle the top towards the driver. The Panavise logo and Part number will be side ways.*

INSTALLATION IS NOW COMPLETE. ENJOY YOUR NEW INDASH by PANAVISE MOUNT.

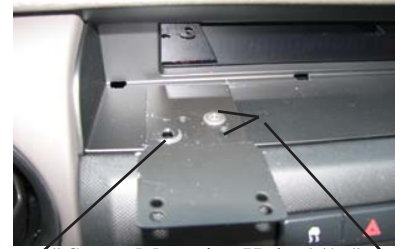


1" Screw Mounting Hole, 9/16"



Rubber Mat Cut Area



Mount in Place with Mounting Plate in Left Side Down Position

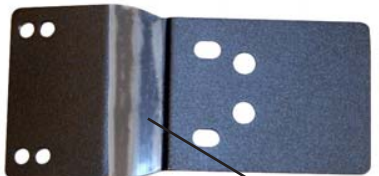

Tape Installation Location



Mount in Place with Mounting Plate in Left Side Down Position on Nav.



Mount in Place with Mounting Plate in Right Side Down Position

03-13-13

