

Excellent Integrated System Limited

Stocking Distributor

Click to view price, real time Inventory, Delivery & Lifecycle Information:

[Maxim Integrated](#)
[DS3150DK](#)

For any questions, you can email us directly:

sales@integrated-circuit.com




DS3150DK

Demo Kit for the DS3150 DS3/E3/STS-1 LIU

www.maxim-ic.com

FEATURES

- Small size: approximately 3" x 4"
- Soldered-down DS3150 in 48-pin TQFP package for best signal integrity
- Line-side BNC connectors for Tx+/Tx- and Rx+/Rx- differential pairs
- High-frequency 2:1 transformers on the transmit and receive differential pairs
- Carefully designed layout for all analog signal paths
- System-side connector for TCLK/TPOS/TNEG, RCLK/RPOS/RNEG, MCLK, and PRBS supports external data source/sink
- Jumpers to control EFE, ICE, LBKS*, LBO, RMON, TDS0, TDS1/OFSEL, TESS, TTS,* and ZCSE*
- Jumpers to connect TCLK to DS3 oscillator, E3 oscillator or connector pin
- Jumpers to connect MCLK to DS3 oscillator, E3 oscillator, connector pin, V_{CC}, or ground
- LEDs for DM* (red), LOS* (red), PRBS sync (green), and V_{DD} (green)
- Banana jack connectors for V_{DD} and GND support use of lab power supplies
- Silk-screened documentation for common hardware modes on bottom side of the board

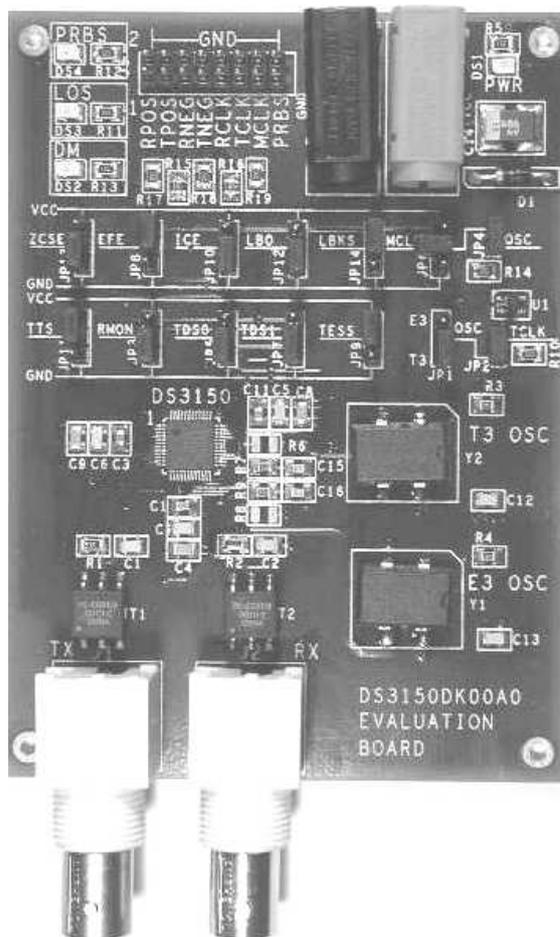


DESCRIPTION

The DS3150DK is a small, self-contained evaluation kit for the DS3150 DS3/E3/STS-1 LIU. A soldered DS3150 and careful layout of the analog-signal traces ensure maximum signal integrity. Jumpers on the board allow the user to configure the DS3150 in any mode. LEDs indicate V_{CC} present, loss of signal, transmit driver failure, and PRBS sync. The board provides BNC connectors for the line-side transmit and receive differential pairs and a header for various system-side signals. On-board oscillators serve as local timing sources for DS3 and E3 operation. All jumpers, LEDs, and connectors are clearly labeled to make the board as easy as possible to use.

BOARD FLOOR PLAN

Figure 1 shows the floor plan of the DS3150DK. The DS3150 is in the center of the board. The line-side BNC connectors for the Tx and Rx differential pairs are at the bottom of the board, while the system connector and configuration jumpers are at the top. The LEDs for DM*, LOS*, and PRBS are in the upper left-hand corner; the power supply connectors and power indicator LED are in the upper right. The T3 and E3 oscillators sit to the right of the DS3150. All analog signal traces were carefully designed to ensure signal integrity.

Figure 1. BOARD FLOOR PLAN

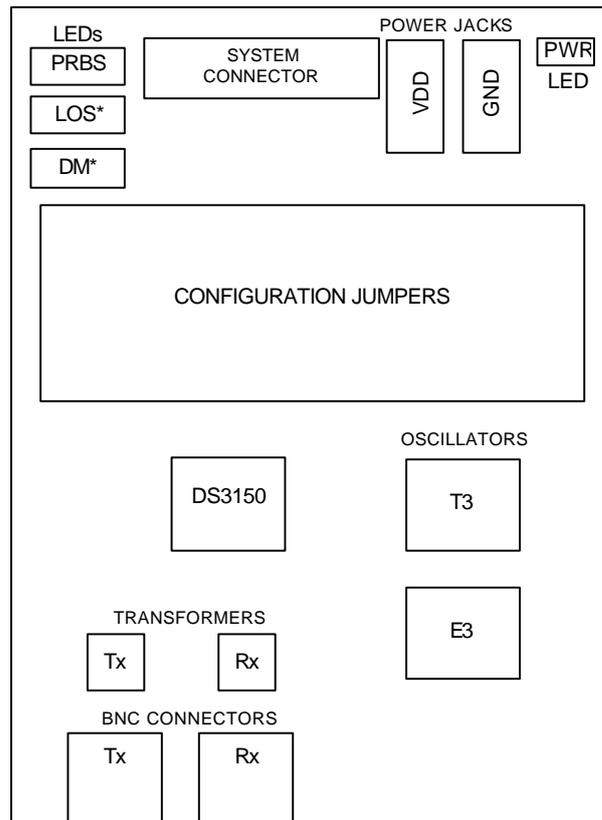


JUMPERS

Configuration Inputs. The jumpers on the DS3150DK allow the user to configure the DS3150 in any of its operating modes (Figure 2). Each configuration input pin on the DS3150 has a corresponding jumper to connect the pin to V_{DD} or GND (or leave it floating). Silk-screen labels around the jumpers show that the DS3150 configuration pins are wired to the center posts of the jumper sites. Additional board markings indicate that a V_{CC} rail is connected to the top post of each jumper site while a GND rail is connected to the bottom posts. Jumpers JP3, JP5, JP7, JP8, JP9, JP10, JP11, JP12, JP13, and JP14 control configuration input pins on the DS3150.

TCLK. On the right side of the board, jumper JP1 connects either the T3 oscillator output or the E3 oscillator output to the intermediate node OSC. Install JP1 between top and middle posts for an E3 clock or between the middle and bottom posts for a T3 clock. Install jumper JP2 to connect the DS3150 TCLK pin to the OSC node. Leave JP2 uninstalled to source TCLK from the System Connector.

MCLK. Jumpers JP4 and JP6 control the DS3150 MCLK pin. Install jumper JP4 (and not JP6) to connect the DS3150 MCLK pin to the OSC node. Install jumper JP6 (and not JP4) to connect the MCLK pin to V_{CC} or GND. Leave both JP4 and JP6 uninstalled to source MCLK from the System Connector.


Figure 2. DS3150DK JUMPERS

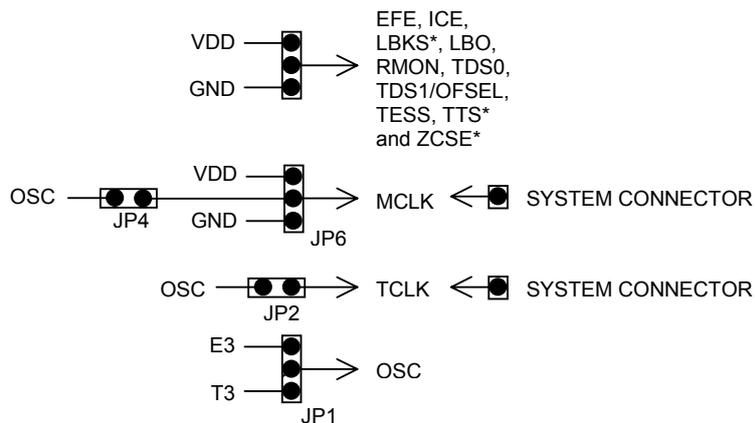

LINE-SIDE CONNECTIONS

The DS3150DK implements the Tx and Rx line-interface networks recommended in the DS3150 data sheet and shown in Figure 3. To connect the DS3150 to DS3, E3, or STS-1 test equipment, connect the equipment to BNC connectors J1 and J2 using coaxial cables. To externally loopback the DS3150 from transmitter to receiver, connect J1 and J2 together through a length of cable or a cable simulator.


Figure 3. DS3150DK LINE SIDE CIRCUITRY

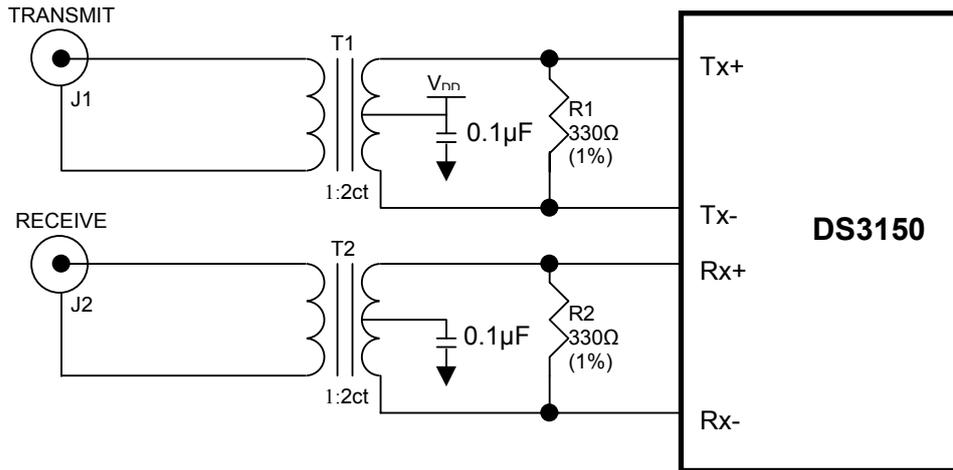

SYSTEM CONNECTOR

The 16-pin System Connector at the top of the board gives access to the following DS3150 signals: RPOS, TPOS, RNEG, TNEG, RCLK, TCLK, MCLK, and PRBS. Use the System Connector to connect the DS3150 to an external framer or other data source/sink. To configure the DS3150DK board for an external remote loopback, place TCLK-RCLK, TPOS-RPOS, and TNEG-RNEG jumpers (Figure 4).

Figure 4. SYSTEM CONNECTOR

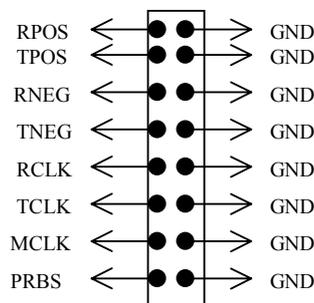

POWER SUPPLY CONNECTORS

Connect a 3.3V power supply across the red (V_{CC}) and black (GND) banana jacks. When a power supply is present, the green PWR LED is lit.

BASIC DS3150DK CONFIGURATION

Table 1, Table 2, and Table 3 list jumper settings for basic DS3150 configurations for T3, E3, and STS-1 modes, respectively. These example configurations provide a quick start to using the DS3150DK and may not be the proper configuration for your specific application. To set up other DS3150 configurations with the DS3150DK, refer to the DS3150 data sheet for more details about configuration pins and options.

Table 1. BASIC T3 CONFIGURATION

| SIGNAL NAME | JUMPER POSITION | | JUMPER | ACTION |
|-------------|-------------------------------------|-------------------------------------|--------|-------------------------------|
| | GND | V _{CC} | | |
| ZCSE* | <input checked="" type="checkbox"/> | <input type="checkbox"/> | JP13 | B3ZS encoder/decoder enabled |
| EFE | <input type="checkbox"/> | <input checked="" type="checkbox"/> | JP8 | Enhanced features enabled |
| ICE | <input checked="" type="checkbox"/> | <input type="checkbox"/> | JP10 | Normal RCLK, normal TCLK |
| LBO | <input checked="" type="checkbox"/> | <input type="checkbox"/> | JP12 | Cable > 225ft |
| LBKS* | <input type="checkbox"/> | <input checked="" type="checkbox"/> | JP14 | No loopback enabled |
| MCLK | <input type="checkbox"/> | <input type="checkbox"/> | JP6 | Don't wire MCLK high or low |
| TTS* | <input type="checkbox"/> | <input checked="" type="checkbox"/> | JP11 | Enable transmit driver |
| RMON | <input checked="" type="checkbox"/> | <input type="checkbox"/> | JP3 | Disable 20dB preamp |
| TDS0 | <input checked="" type="checkbox"/> | <input type="checkbox"/> | JP5 | Transmit T3 AIS pattern |
| TDS1 | <input type="checkbox"/> | <input checked="" type="checkbox"/> | JP7 | |
| TESS | <input type="checkbox"/> | <input checked="" type="checkbox"/> | JP9 | T3 mode |
| | | | | |
| SIGNAL NAME | JUMPER POSITION | | JUMPER | ACTION |
| TCLK | <input type="checkbox"/> | <input checked="" type="checkbox"/> | JP2 | Source TCLK from OSC node |
| MCLK | <input type="checkbox"/> | <input checked="" type="checkbox"/> | JP4 | Source MCLK from OSC node |
| | | | | |
| SIGNAL NAME | JUMPER POSITION | | JUMPER | ACTION |
| | T3 | E3 | | |
| OSC | <input checked="" type="checkbox"/> | <input type="checkbox"/> | JP1 | Source OSC from T3 oscillator |

Table 2. BASIC E3 CONFIGURATION

| SIGNAL NAME | JUMPER POSITION | | JUMPER | ACTION |
|-------------|-------------------------------------|-------------------------------------|--------|-------------------------------|
| | GND | V _{CC} | | |
| ZCSE* | <input checked="" type="checkbox"/> | <input type="checkbox"/> | JP13 | HDB3 encoder/decoder enabled |
| EFE | <input type="checkbox"/> | <input checked="" type="checkbox"/> | JP8 | Enhanced features enabled |
| ICE | <input checked="" type="checkbox"/> | <input type="checkbox"/> | JP10 | Normal RCLK, normal TCLK |
| LBO | <input checked="" type="checkbox"/> | <input type="checkbox"/> | JP12 | Cable > 225ft |
| LBKS* | <input type="checkbox"/> | <input checked="" type="checkbox"/> | JP14 | No loopback enabled |
| MCLK | <input type="checkbox"/> | <input type="checkbox"/> | JP6 | Don't wire MCLK high or low |
| TTS* | <input type="checkbox"/> | <input checked="" type="checkbox"/> | JP11 | Enable transmit driver |
| RMON | <input checked="" type="checkbox"/> | <input type="checkbox"/> | JP3 | Disable 20dB preamp |
| TDS0 | <input type="checkbox"/> | <input checked="" type="checkbox"/> | JP5 | Transmit unframed all 1's |
| TDS1 | <input checked="" type="checkbox"/> | <input type="checkbox"/> | JP7 | (E3 AIS) |
| TESS | <input checked="" type="checkbox"/> | <input type="checkbox"/> | JP9 | E3 mode |
| | | | | |
| SIGNAL NAME | JUMPER POSITION | | JUMPER | ACTION |
| TCLK | <input type="checkbox"/> | <input checked="" type="checkbox"/> | JP2 | Source TCLK from OSC node |
| MCLK | <input type="checkbox"/> | <input checked="" type="checkbox"/> | JP4 | Source MCLK from OSC node |
| | | | | |
| SIGNAL NAME | JUMPER POSITION | | JUMPER | ACTION |
| | T3 | E3 | | |
| OSC | <input type="checkbox"/> | <input checked="" type="checkbox"/> | JP1 | Source OSC from E3 oscillator |


Table 3. BASIC STS-1 CONFIGURATION


| SIGNAL NAME | JUMPER POSITION | | JUMPER | ACTION |
|-------------|-------------------------------------|-------------------------------------|--------|--|
| | GND | V _{CC} | | |
| ZCSE* | <input checked="" type="checkbox"/> | <input type="checkbox"/> | JP13 | B3ZS encoder/decoder enabled |
| EFE | <input type="checkbox"/> | <input checked="" type="checkbox"/> | JP8 | Enhanced features enabled |
| ICE | <input checked="" type="checkbox"/> | <input type="checkbox"/> | JP10 | Normal RCLK, normal TCLK |
| LBO | <input checked="" type="checkbox"/> | <input type="checkbox"/> | JP12 | Cable > 225ft |
| LBKS* | <input type="checkbox"/> | <input checked="" type="checkbox"/> | JP14 | No loopback enabled |
| MCLK | <input type="checkbox"/> | <input type="checkbox"/> | JP6 | Don't wire MCLK high or low |
| TTS* | <input type="checkbox"/> | <input checked="" type="checkbox"/> | JP11 | Enable transmit driver |
| RMON | <input checked="" type="checkbox"/> | <input type="checkbox"/> | JP3 | Disable 20dB preamp |
| TDS0 | <input type="checkbox"/> | <input checked="" type="checkbox"/> | JP5 | Transmit unframed all ones |
| TDS1 | <input checked="" type="checkbox"/> | <input type="checkbox"/> | JP7 | |
| TESS | <input type="checkbox"/> | <input type="checkbox"/> | JP9 | Float = STS-1 mode |
| | | | | |
| SIGNAL NAME | JUMPER POSITION | | JUMPER | ACTION |
| TCLK | <input type="checkbox"/> | <input type="checkbox"/> | JP2 | Not Installed = Source TCLK from System Connector ¹ |
| MCLK | <input type="checkbox"/> | <input type="checkbox"/> | JP4 | Not Installed = Source MCLK from System Connector ¹ |
| | | | | |
| SIGNAL NAME | JUMPER POSITION | | JUMPER | ACTION |
| | T3 | E3 | | |
| OSC | <input type="checkbox"/> | <input type="checkbox"/> | JP1 | Not installed = Don't select T3 or E3 oscillator ¹ |

¹The DS3150 does not have an on-board STS-1 oscillator. Apply a transmission-quality STS-1 clock to the TCLK pin on the System Connector.

BILL OF MATERIALS
Table 4. BILL OF MATERIALS

| ITEM | DESCRIPTION | MANUFACTURER PART NUMBER | MANUFACTURER | QTY | ADDITIONAL INFORMATION | REF DESIGNATOR |
|------|-----------------------|--------------------------|---------------------------|-----|------------------------|---|
| 1 | 3.3V Oscillator | CPPX7-A5BC | Cardinal Components | 1 | 44.736MHz Frequency | Y2 |
| 2 | 3.3V Oscillator | CPPX7-A5BC | Cardinal Components | 1 | 34.368MHz Frequency | Y1 |
| 3 | T3/E3 SMD Transformer | PE-65968 | Pulse | 2 | | T1, T2 |
| 4 | Green SMD LED | LN1351C-(TR) | Panasonic | 2 | | DS1, DS4 |
| 5 | Red SMD LED | LN1251C-(TR) | Panasonic | 2 | | DS2, DS3 |
| 6 | DS3150 TQFP48 | DS3150T | Dallas Semiconductor | 1 | | DS3150 |
| 7 | MAX6316L | MAX6316LUK26CY-T | Maxim Integrated Products | 1 | | U1 |
| 8 | BNC CONN | | | 2 | | J1, J2 |
| 9 | Red Banana Jack | 1646219 | Mouser | 1 | | VCC |
| 10 | Black Banana Jack | 1646218 | Mouser | 1 | | GND |
| 11 | SMD 330Ω | | | 3 | Precision (1%) | R1, R2, R5 |
| 12 | SMD 68μF Cap | | | 1 | | C14 |
| 13 | SMD 350Ω | | | 2 | | R11, R13 |
| 14 | SMD 100Ω | | | 2 | | R7, R9 |
| 15 | SMD 35Ω | | | 5 | | R10, R14, R17, R18, R19 |
| 16 | SMD 300Ω | | | 1 | | R12 |
| 17 | SMD 10kΩ | | | 4 | | R3, R4, R15, R16 |
| 18 | Protection Diode | IN4001 | | 1 | | D1 |
| 19 | Jumper 3-Pin | | | 12 | | JP1, JP3, JP5, JP6, JP7, JP8, JP9, JP10, JP11, JP12, JP13, JP14 |
| 20 | Jumper 2-Pin | | | 2 | | JP2, JP4 |
| 21 | SMD 1μF CAP | | | 3 | | C9, C10, C11 |
| 22 | SMD 0.1μF CAP | | | 7 | | C1, C2, C6, C7, C8, C12, C13 |
| 23 | SMD 0.01μF CAP | | | 3 | | C3, C4, C5 |
| 24 | SMD 0.001μF CAP | | | 2 | | C15, C16 |
| 25 | Mounting Connectors | | | 4 | | I11, I12, I13, I14 |
| 26 | 16-Pin Header | | | 1 | | J3 |

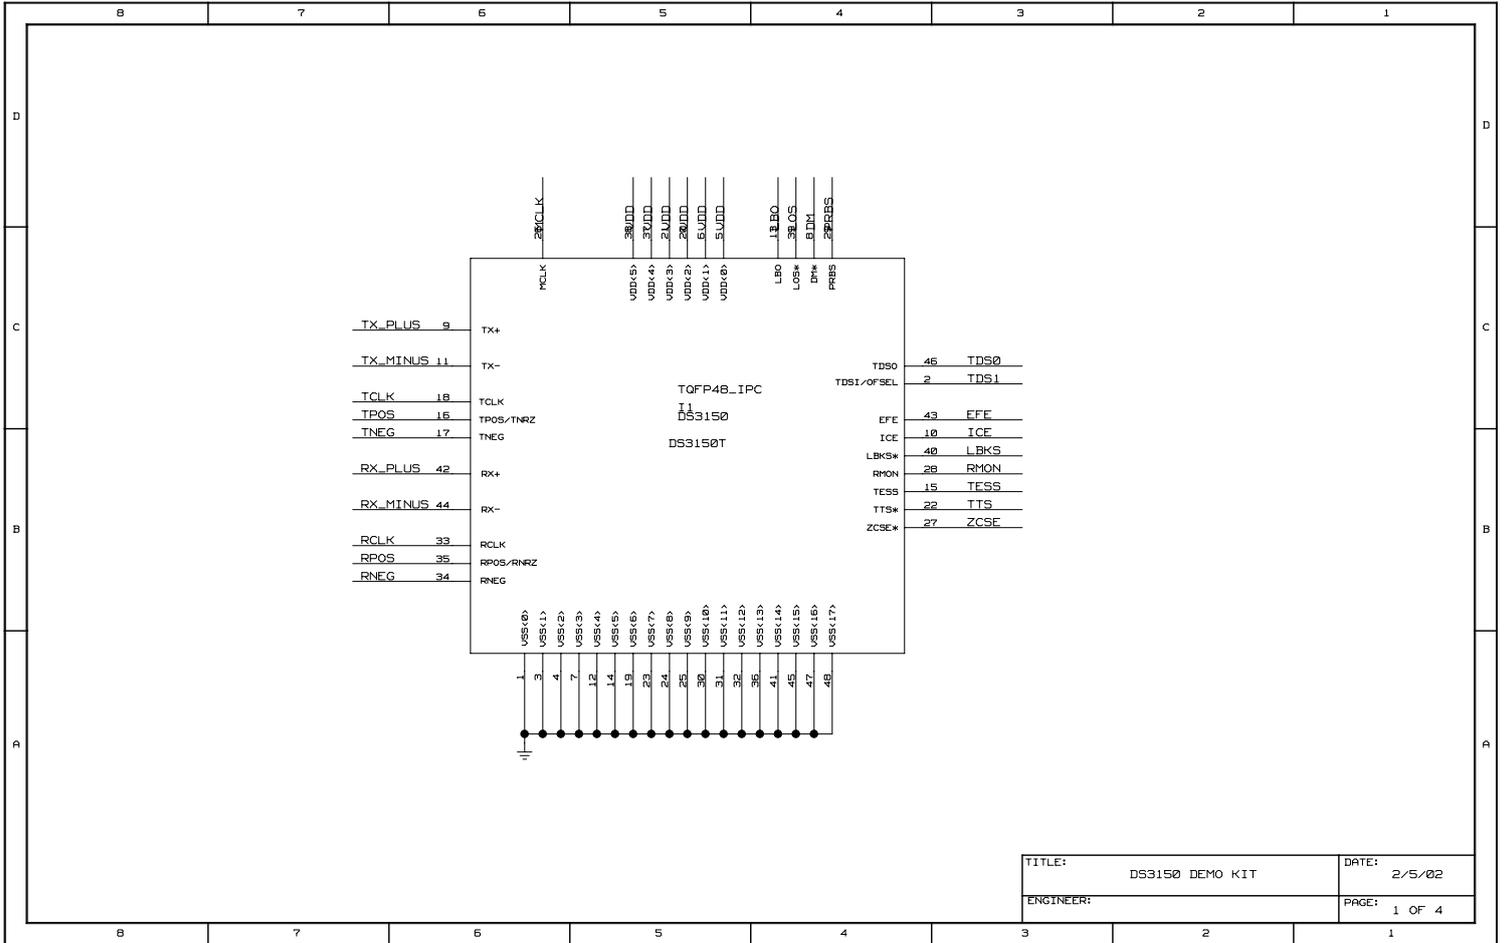

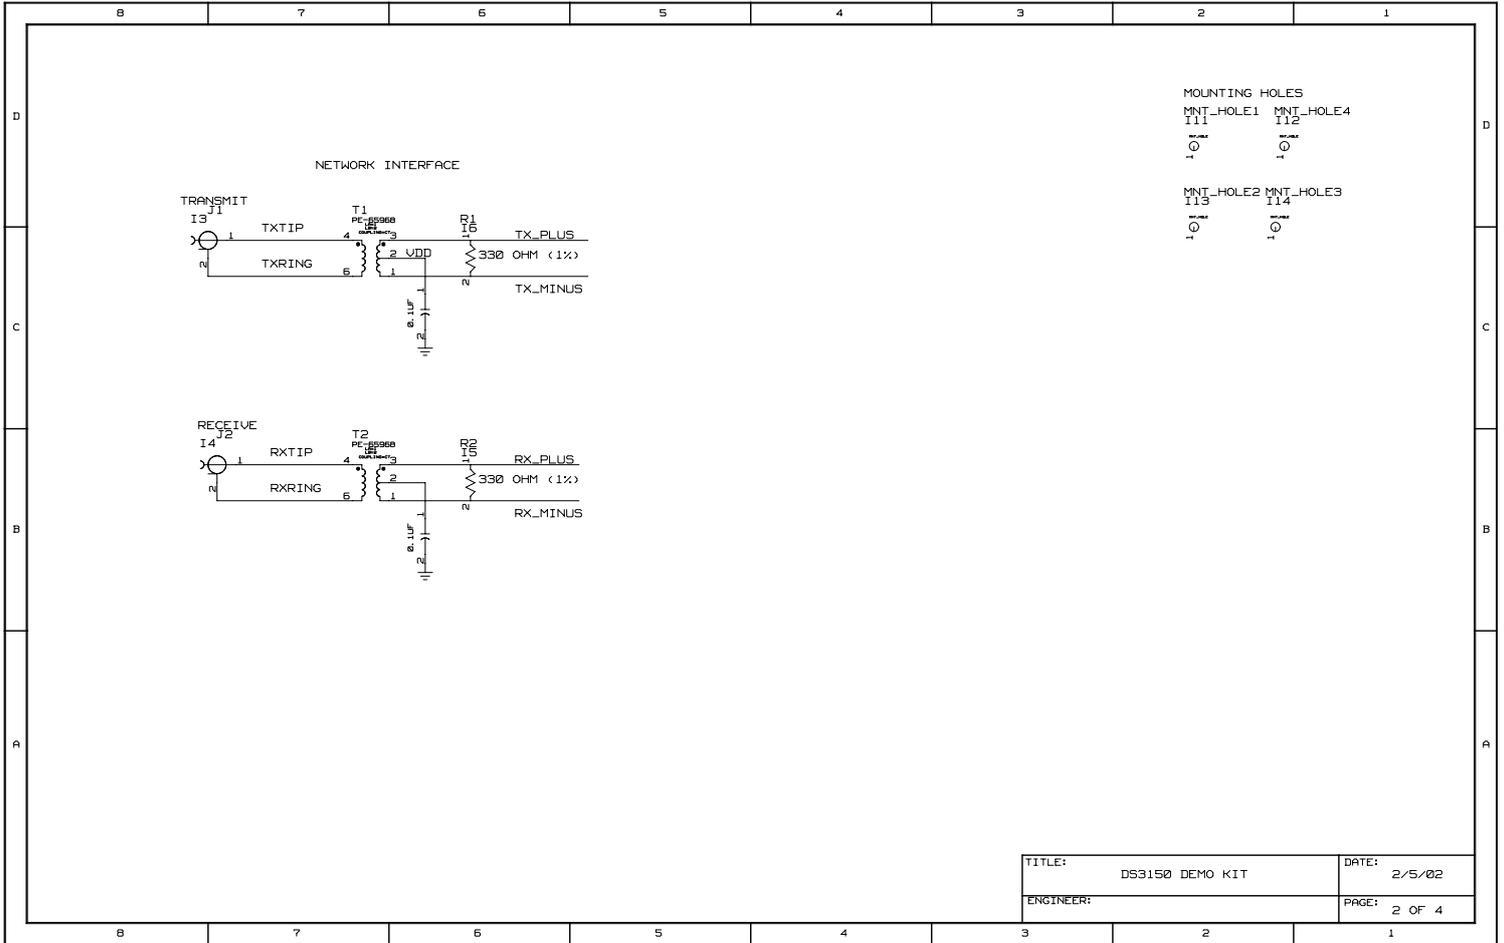

| | | | |
|-----------|-----------------|-------|--------|
| TITLE: | DS3150 DEMO KIT | DATE: | 2/5/02 |
| ENGINEER: | | PAGE: | 2 OF 4 |

