

## **Excellent Integrated System Limited**

Stocking Distributor

Click to view price, real time Inventory, Delivery & Lifecycle Information:

Maxim Integrated MAX13042EEVKIT+

For any questions, you can email us directly: <u>sales@integrated-circuit.com</u>



Distributor of Maxim Integrated: Excellent Integrated System Limited Datasheet of MAX13042EEVKIT+ - KIT EVAL MAX13042E 4CH XLATOR Contact us: sales@integrated-circuit.com Website: www.integrated-circuit.com

19-1015; Rev 1; 2/08

# MAX13042E Evaluation Kit

### Features

### **General Description**

The MAX13042E evaluation kit (EV kit) demonstrates the MAX13042E 4-channel, bidirectional logic-level translator, featured in a tiny 12-bump UCSP™ package. The MAX13042E translates between VL and VCC logic levels and guarantees data rates up to 100Mbps.

As configured, the EV kit dedicates two channels for translation between  $V_L$  to  $V_{CC}$  and two channels for translation between V<sub>CC</sub> to V<sub>L</sub>. The EV kit gives the option of using SMA connectors or test points at the input signal lines, while providing scope probe jacks for monitoring the outputs. The VL range is 1.62V to 3.2V and the  $\pm 15$ kV ESD-protected V<sub>CC</sub> range is 2.2V to 3.6V.

- Supply Voltage Ranges 1.62V to 3.2V (VL) 2.2V to 3.6V (Vcc)
- ±15kV ESD Protection on I/O V<sub>CC</sub> Lines
- **Two Dedicated Channels to Allow Translation** from V<sub>L</sub> to V<sub>CC</sub>
- Two Dedicated Channels to Allow Translation from V<sub>C</sub> to V<sub>L</sub>
- 100Mbps Guaranteed Data Rates
- Enable Input
- SMA Inputs and 5mm Scope Probe Jack Outputs
- 12-Bump UCSP (1.54mm x 2.12mm) Package
- Fully Assembled and Tested

PART

#### DESIGNATION QTY DESCRIPTION 0.1µF ±10%, 16V X7R ceramic capacitors (0402) C1, C2 2 Murata GRM155R71C104K TDK C1005X7R1C104K 1µF ±10%, 6.3V X5R ceramic capacitors (0402) C3 1 Murata GRM155R60J105K TDK C1005X5R0J105K IVL1, IVL2, 4 SMA PCB vertical mounts IVCC3, IVCC4 JU1 1 3-pin header JU2-JU5 4 2-pin headers OVCC1, OVCC2, OVL3, 4 5mm scope probe jacks OVL4 R1-R8 8 $0\Omega$ resistors (0603) R9-R12 4 49.9Ω ±1% resistors (0402) TP1-TP4 0 Not installed, test points 4-channel, bidirectional logic-level translator U1 (12-bump UCSP, 1.54mm x 2.12mm) 1 Maxim MAX13042EEBC+ (Top Mark: ADQ) 5 Shunts PCB: MAX13042E EV Kit+ 1

### Component List

MAX13042EEVKIT+

#### +Denotes lead-free and RoHS-compliant.

### **Component Suppliers**

**Ordering Information** 

TYPE

EV Kit

SUPPLIER	PHONE	WEBSITE	
Murata Mfg. Co., Ltd.	770-436-1300	www.murata.com	
TDK Corp.	847-803-6100	www.component.tdk.com	

Note: Indicate that you are using the MAX13042E when contacting these component suppliers.

UCSP is a trademark of Maxim Integrated Products, Inc.

### 

Maxim Integrated Products 1

For pricing, delivery, and ordering information, please contact Maxim Direct 1-888-629-4642, or visit Maxim's website at www.maxim-ic.com.



## MAX13042E Evaluation Kit

### **Quick Start**

#### **Recommended Equipment**

Before beginning, the following equipment is needed:

- 1.62V to 3.2V DC power supply
- 2.2V to 3.6V DC power supply
- Logic function generator
- Oscilloscope
- Standard 5mm scope probe

#### Procedure

The MAX13042E EV kit is fully assembled and tested. Follow the steps below to verify board operation. **Caution: Do not turn on the power supply until all connections are completed.** 

- 1) Verify that a shunt is installed on jumper JU1 between pins 1-2 (normal operation).
- Set the logic function generator to produce a 1MHz, 2VP-P, 1V offset square wave. Disable the logic function generator output.
- Connect the logic function generator to SMA input IVL1. Terminate function generator as necessary.
- Connect the positive terminal of the 2V supply to the VL PCB pad and the ground terminal to the GND PCB pad.
- 5) Connect the positive terminal of the 3V supply to the VCC PCB pad and the ground terminal to the GND PCB pad.
- 6) Place an oscilloscope probe at scope jack output OVCC1.
- 7) Enable the power supplies and the logic function generator output.
- 8) Verify that OVCC1 shows a 1MHz, 3V<sub>P-P</sub> square wave with a 1.5V offset.

### **Detailed Description**

The MAX13042E EV kit demonstrates the MAX13042E 4-channel, bidirectional logic-level translator, featured in a tiny 12-bump UCSP package. The MAX13042E translates between V<sub>L</sub> (1.62V to 3.2V) and V<sub>CC</sub> (2.2V to 3.6V) logic levels and guarantees data rates up to 100Mbps. The MAX13042E also features  $\pm$ 15kV ESD protection on all I/O V<sub>CC</sub> lines.

The MAX13042E EV kit circuit features I/O traces of matched length (within 5 mils) to maintain propagationtime uniformity. The EV kit dedicates two channels for translation between V<sub>L</sub> to V<sub>CC</sub> and two channels for translation between V<sub>CC</sub> to V<sub>L</sub>. Input signals can either be applied using SMA connectors IVL1, IVL2, IVCC3, and IVCC4 or at test points TP1–TP4. Output signals are monitored using oscilloscope probe jacks OVCC1, OVCC2, OVL3, and OVL4. The EV kit also utilizes the MAX13042E's enable function through configuration of jumper JU1.

#### **Enable Input**

Jumper JU1 controls the enable input of the MAX13042E. See Table 1 for JU1 jumper selection.

# Table 1. Enable (EN) Pin Setting (Jumper JU1)

SHUNT POSITION	ENABLE PIN (EN)	EV KIT FUNCTION		
1-2*	Connected to $V_L$	Enabled (normal operation)		
2-3	Connected to GND	Disabled (tri-state operation)		
*Default position.				

#### SMA Inputs (IVL1, IVL2, IVCC3, and IVCC4)

To utilize the SMA connectors to apply input signals to the EV kit, these connections must be appropriately terminated. See Table 2 for SMA input termination settings. Signal traces will remain of matched length in this configuration.

# Table 2. SMA Input Termination (Jumpers JU2–JU5)

SHUNT POSITION	INPUT TERMINATION
Installed	49.9 $\Omega$ termination
Not installed*	None**
* D ( // )''	•

\*Default position.

\*\*Must configure signal generator for high-impedance output.

#### **Test Point Input Option (TP1-TP4)**

To implement use of the test point inputs, remove the appropriate resistor (R1, R2, R7, or R8) and apply a signal to the corresponding test point. Signal traces will remain of matched length in this configuration. GND pads are conveniently located on the EV kit to ground the input signal. **Note:** The input signal is not as well matched as it is with the SMA inputs.





## MAX13042E Evaluation Kit

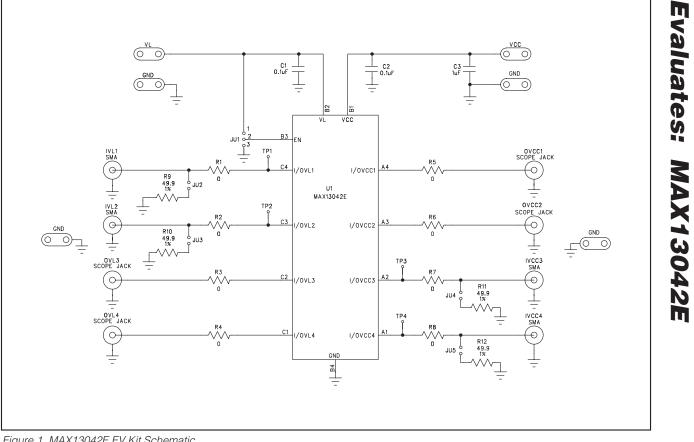


Figure 1. MAX13042E EV Kit Schematic



**Distributor of Maxim Integrated: Excellent Integrated System Limited** Datasheet of MAX13042EEVKIT+ - KIT EVAL MAX13042E 4CH XLATOR Contact us: sales@integrated-circuit.com Website: www.integrated-circuit.com

## MAX13042E Evaluation Kit

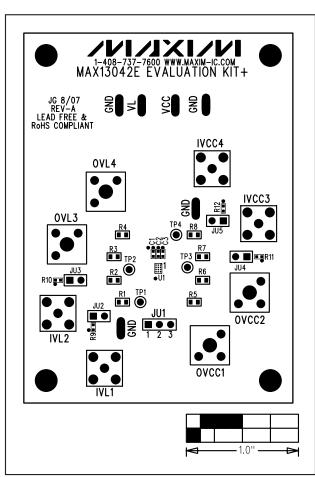


Figure 2. MAX13042E EV Kit Component Placement Guide— Component Side

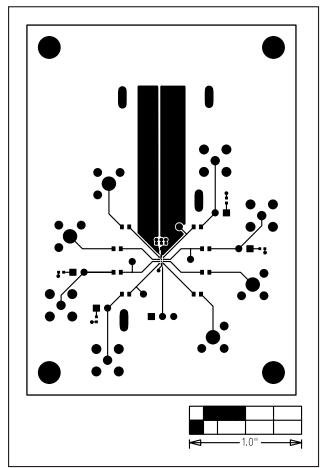


Figure 3. MAX13042E EV Kit PCB Layout—Component Side



### 0 0 0 Ο $\mathbf{O}$ 0 0 Ο $\mathbf{O}$ 0 0 Ο 0 ĽЮ Ο 0 1.0

## **MAX13042E Evaluation Kit**

Figure 4. MAX13042E EV Kit PCB Layout—Solder Side



## MAX13042E Evaluation Kit

### **Revision History**

REVISION NUMBER	REVISION DATE	DESCRIPTION	PAGES CHANGED
0	10/07	Initial release	_
1	2/08	Corrected labeling on schematic.	3

Maxim cannot assume responsibility for use of any circuitry other than circuitry entirely embodied in a Maxim product. No circuit patent licenses are implied. Maxim reserves the right to change the circuitry and specifications without notice at any time.

\_Maxim Integrated Products, 120 San Gabriel Drive, Sunnyvale, CA 94086 408-737-7600

© 2008 Maxim Integrated Products

6

is a registered trademark of Maxim Integrated Products, Inc.