

# **Excellent Integrated System Limited**

Stocking Distributor

Click to view price, real time Inventory, Delivery & Lifecycle Information:

Molex Connector Corporation 0639016100

For any questions, you can email us directly: <u>sales@integrated-circuit.com</u>




**Distributor of Molex Connector Corporation: Excellent Integrated System Limited** Datasheet of 0639016100 - FINE ADJUST APPLICATOR Contact us: sales@integrated-circuit.com Website: www.integrated-circuit.com

Fine Adjust Applicator for GET 0.64 mm Socket Terminals



# FineAdjust Applicator Applicator Tooling Specification Sheet Order No. 63901-6100

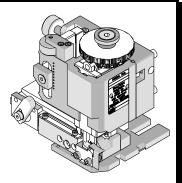

### FEATURES


- Quick punch removal with the push of a button for fast and easy tooling change
- Applicator designed to industry standard mounting and shut height 135.80mm (5.346")
- Quick set-up time; plus the crimp height, track and feed adjustments can be set without removing the applicator from the press
- Fine adjustment allows users to achieve target with little effort by adjusting in increments of .015mm (.0006") for conductor crimp height and .063mm (.0025") for insulation height
- Independent adjustment rings allow users to quickly adjust the conductor or insulation crimp height without affecting each other
- Directly adapts to most automatic wire processing machines

#### SCOPE

Products: GET 0.64 mm (Global Electronic Technology) Connector System Socket Terminal, 0.50 - 0.75mm<sup>2</sup> and 18-20 AWG.

Terminal	Terminal	Wire Size		Ins	ulation Di	Strip Length			
Series No.	Order No.			IPC/WHI	Terminal				
Series NO.	order No.	AWG	mm²	mm	ln.	mm	In.	mm	In.
13933	1393366-2	Metric Only	0.50	1.60	.063	1.60	.063	4.40	.073
98853	98853-0014	Metric Only	0.50	1.60	.063	1.60	.063	4.40	.073
To achieve optimum IPC-A620 insulation crimps, use this insulation OD range.									
	0	verall insulation	on OD s	specificatio	on for term	inal			

#### **DEFINITION OF TERMS**

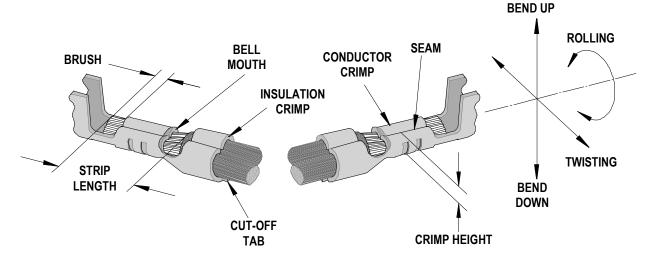

The above terminal drawing is a generic terminal representation. It is not an image of a terminal listed in the scope.

Doc No: ATS-639016100 Revision: B Release Date: 09-03-09 Revision Date: 09-14-09 **UNCONTROLLED COPY** 



Fine Adjust Applicator for GET 0.64 mm Socket Terminals

#### **CRIMP SPECIFICATION**

Terminal Series No.	Bell mouth		Cut-off Tab	o Maximum	*Conductor Brush			
Terminal Series NO.	mm	In.	mm	ln.	mm	In.		
13933	0.20	.008	0.50	.020	0.00-1.00	.000040		
98853	0.20	.008	0.50	.020	0.00-1.00	.000040		
Wire brush must be flush or below top of Conductor Crimp.								

	Bend up Bend down		Twist Roll		Punch Width (Ref)				Seem	
Terminal Series No.					Conductor		Insulation		Seam	
	Degree		Degree		mm	In	mm	In	Seam shall not be open and no wire allowed	
13933	2.5	2.5	1.6	1.6	1.78	.070	2.05	.081	out of the crimping area	
98853	2.5	2.5	1.6	1.6	1.78	.070	2.05	.081	out of the orimping area	

After crimping, the crimp profiles should measure the following:

Terminal Series No.	Wire Size		Conductor				Insulation Maximum				Pull Force	
			Crimp Height		Crimp Width		Crimp Height		Crimp Width (Ref.)		Minimum	
	AWG	mm <sup>2</sup>	mm	ln.	mm	ln.	mm	ln.	mm	ln.	Ν	Lb.
13933	Metric Only	0.50	0.98-1.06	.040042	1.78-1.93	.070076	2.10	.083	2.05	.081	75.0	16.86
98853	Metric Only	0.50	0.98-1.06	.040042	1.78-1.93	.070076	2.10	.083	2.05	.081	75.0	16.86

- Tool Qualification Notes:
- 1. Pull Force should be measured with no influence from the insulation crimp.
- 2. The above specifications are guidelines to an optimum crimp.



Fine Adjust Applicator for GET 0.64 mm Socket Terminals


## PARTS LIST

FineAdjust Applicator 63901-6100									
Item	Order No	Engineering No.	Description	Quantity					
		Perishable	e Tooling						
	63901-6170	63901-6170	Tool Kit (All "Y" Items)	REF					
1	63901-6101	63901-6101	Conductor Punch	1 Y					
2	63901-6102	63901-6102	Conductor Anvil	1 Y					
3	63901-6103	63901-6103	Insulation Punch	1 Y					
4	63901-6104	63901-6104	Insulation Anvil	1 Y					
5	63901-6105	63901-6105	Cut-Off Plunger	1 Y					
6	63901-6106	63901-6106	Front Plunger Retainer	1 Y					
		Other Con	nponents						
7	11-18-4094	60709A111	Feed Guide	1					
8	63443-0021	63443-0021	Key	1					
9	63443-0061	63443-0061	Wire stop	1					
10	63443-6009	63443-6009	Rear Cover	1					
11	63600-3351	63600-3351	Compression Spring	1					
12	63700-0539	63700-0539	Cut-off Plunger Spring	1					
13	63867-3007	63867-3007	Bottom Cap	1					
14	63901-6107	63901-6107	Anvil Mount	1					
15	63901-6108	63901-6108	Wire Hold Down	1					
16	63901-6109	63901-6109	Front Plunger Striker	1					
		Frai	me						
17	63800-4901	63800-4901	Тор	1					
18	63801-3281	63801-3281	Base	1					
19	63801-4650	63801-4650	Track	1					
		Hard	ware						
20	N/A	N/A	M3 by 6 Long SHCS	2**					
21	N/A	N/A	M4 by 8 Long Set Screw	1**					
22	N/A	N/A	M4 by 10 Long SHCS	2**					
23	N/A	N/A	M4 by 12 Long BHCS	2**					
24	N/A	N/A	M4 by 16 Long SHCS	1**					
25	N/A	N/A	M4 by 50 Long SHCS	2**					
26	N/A	N/A	M5 by 12 Long SHCS	1**					
27	N/A	N/A	2mm by 8 Long Roll Pin	1**					
28	N/A	N/A	3mm by 6 Long Roll Pin	1**					
29	N/A	N/A	#10-32 by 1/4"Long BHCS	1**					
** Av	ailable from an	industrial supply cor	mpany such as MSC (1-800-6	45-7270).					



**Distributor of Molex Connector Corporation: Excellent Integrated System Limited** Datasheet of 0639016100 - FINE ADJUST APPLICATOR Contact us: sales@integrated-circuit.com Website: www.integrated-circuit.com

Fine Adjust Applicator for GET 0.64 mm Socket Terminals

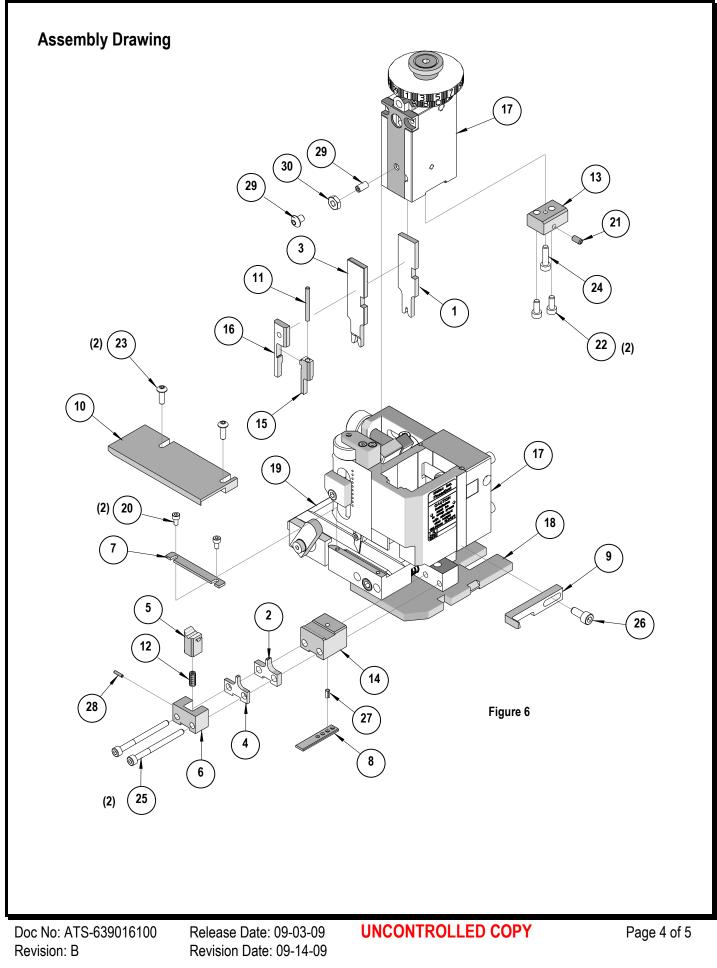



Fine Adjust Applicator for GET 0.64 mm Socket Terminals

#### NOTES

- 1. Molex recommends an extra perishable tooling kit be maintained at your facility.
- 2. Verify tooling alignment by manually cycling the press and Applicator before crimping under power. Check that all screws are tight.
- 3. Slugs, Terminals, Dirt and Oil should be kept clear of work area.
- 4. Wear safety glasses at all times.
- 5. For recommended maintenance refer to the FineAdjust Manual.

**CAUTION**: This applicator should only be used in a press with a shut height of 135.80 mm (5.346"). Tooling damage could result at a lower setting.

**CAUTION**: To prevent injury never operate this Applicator without the guards supplied with the press or wire-processing machine in place. Reference the press or wire processing manufacturer's instruction manual.

**CAUTION**: Molex crimp specifications are valid only when used with Molex terminals, applicators and tooling.

Americas Headquarters Lisle, Illinois 60532 U.S.A. 1-800-78MOLEX amerinfo@molex.com Far East North Headquarters Yamato, Kanagawa, Japan 81-462-65-2324 feninfo@molex.com Far East South Headquarters Jurong, Singapore 65-6-268-6868 fesinfo@molex.com European Headquarters Munich, Germany 49-89-413092-0 eurinfo@molex.com **Corporate Headquarters** 2222 Wellington Ct. Lisle, IL 60532 U.S.A. 630-969-4550 Fax: 630-969-1352

Visit our Web site at http://www.molex.com

Doc No: ATS-639016100 Revision: B Release Date: 09-03-09 Revision Date: 09-14-09 UNCONTROLLED COPY