

Excellent Integrated System Limited

Stocking Distributor

Click to view price, real time Inventory, Delivery & Lifecycle Information:

[Molex Connector Corporation](#)
[0638810800](#)

For any questions, you can email us directly:


sales@integrated-circuit.com

Mechanical Feed Metal Strip Applicator

Mini-Mac Applicator Mechanical Feed-Metal Strip

molex

Application Tooling Specification Sheet

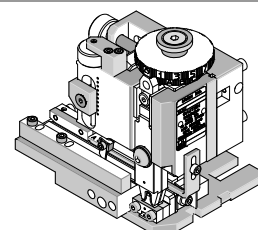

Order No. 63881-0800

FEATURES

- % Directly adapts to most crimp presses and automatic wire processors
- % Applicator designed to industry-standard mounting and shut height of 135.80mm (5.346")
- % Conductor and insulation rings allow quick adjustment for conductor and insulation crimp height change
- % Quick set-up time; plus the crimp height, track and feed adjustments can be set without removing the applicator from the crimp press

SCOPE

Products: Avikrimp™ and Insulkrimp™ Quick Disconnect Metal Strip Terminals, 18-22 AWG

Testing

Mechanical

The tensile test, or pull test, is a means of evaluating the mechanical properties of the crimped connections. The following chart shows the UL and government specifications (MIL-T-7928) for various wire sizes. The tensile strength is shown in pounds and indicates the minimum acceptable force to break or separate the terminal from the conductor.

Color Code	Wire Size (AWG)	*UL - 486 A	*UL - 486 C	*UL - 310	*Military Class 2
Yellow	26	3	N/A	N/A	7
Yellow	24	5	N/A	N/A	10
Red	22	8	8	8	15
Red	20	13	10	13	19
Red	18	20	10	20	38
Blue	16	30	15	30	50
Blue	14	50	25	50	70
Yellow	12	70	35	70	110
Yellow	10	80	40	80	150
Red	8	90	45	N/A	225
Blue	6	100	50	N/A	300

*UL - 486 A - Terminals (Copper conductors only)

*UL - 486 C - Butt Splices, Parallel Splices, Closed End Connectors, and Wire Nuts

*UL - 310 - Quick Disconnects, Flag and Couplers

*Military Class 2- Military Approved Terminals only as listed

Mechanical Feed Metal Strip Applicator

Product List

The following is a partial list of the product order numbers and their specifications that this tool is designed to run. Updates to this list are available on www.molex.com.

Terminal No.	Terminal Eng. No.	Wire Size		Insulation Diameter Maximum		Strip Length	
		AWG	mm ²	mm	In.	mm	In.
19017-0068	AAZ-2137	22-18	0.35-0.80	3.43	.135	6.35	.250
19017-0069	AAZ-2137-032	22-18	0.35-0.80	3.43	.135	6.35	.250
19019-0015	AAZ-8190-032	22-18	0.35-0.80	2.92	.115	6.35	.250
19019-0018	AAZ-8137	22-18	0.35-0.80	2.92	.115	6.35	.250
19019-0019	AAZ-8137-032	22-18	0.35-0.80	2.92	.115	6.35	.250
19019-0021	AAZ-8190	22-18	0.35-0.80	2.92	.115	6.35	.250
19019-0075	AAZ-8134	22-18	0.35-0.80	2.92	.115	6.35	.250
19019-0116	SPL-0593Z	22-18	0.35-0.80	2.92	.115	6.35	.250

Note: To process these terminals, assemble spacers with cutoff tooling as shown in Figure 1. See also parts list and assembly drawing.

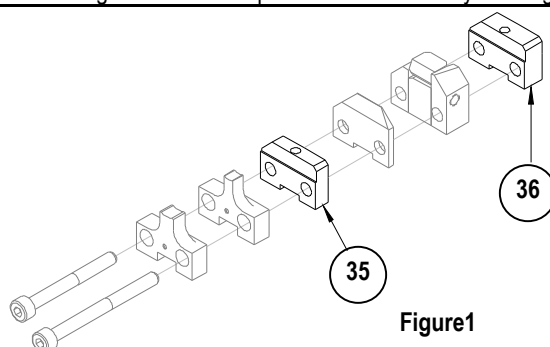


Figure1

Terminal No.	Terminal Eng. No.	Wire Size		Insulation Diameter Maximum		Strip Length	
		AWG	mm ²	mm	In.	mm	In.
19017-0022	AAZ-2140	22-18	0.35-0.80	3.43	.135	6.35	.250
19017-0142	AAZ-2140MOD	22-18	0.35-0.80	3.43	.135	6.35	.250
19019-0020	AAZ-8140	22-18	0.35-0.80	2.92	.115	6.35	.250
19274-0001	AAZ-2140-LIF	22-18	0.35-0.80	3.30	.130	6.35	.250
19275-0001	AAZ-8140-LIF	22-18	0.35-0.80	2.92	.115	6.35	.250

Note: To process these terminals, assemble spacers with cutoff tooling as shown in Figure 2. See also parts list and assembly drawing.

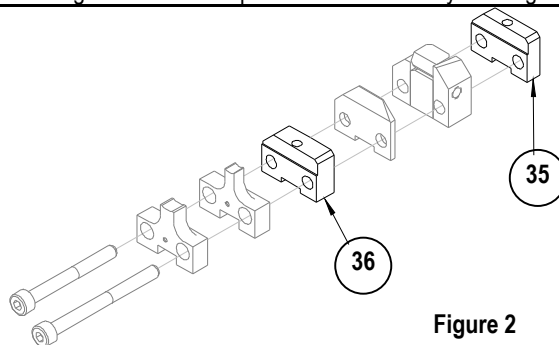


Figure 2

Mechanical Feed Metal Strip Applicator

DEFINITION OF TERMS

The following illustrations are a generic terminal representation and not an exact image of any terminal listed in the scope.

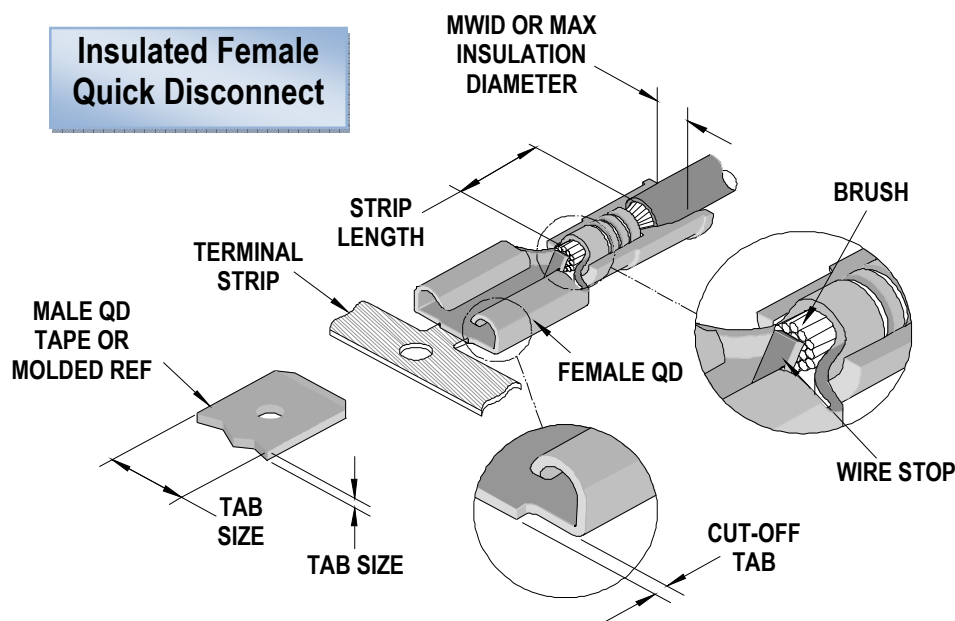


Figure 3

CRIMP SPECIFICATIONS

Wire Size		"X" Dimension Conductor Crimp						Pull Force Minimum	
AWG	mm ²	Mean		Go		No Go		Lbs	N
		In	mm	In	mm	In	mm		
22	0.35	.086	2.18	.083	2.11	.090	2.29	8.0	35.6
20	0.50	.086	2.18	.083	2.11	.090	2.29	13.0	57.8
18	0.80	.086	2.18	.083	2.11	.090	2.29	20.0	90.0

Terminal Series No.	Cut-off Tab Maximum	
	mm	In.
19017	0.25	.010
19019	0.25	.010
19274	0.25	.010
19275	0.25	.010

Tool Qualification Notes:

1. Pull Force should be measured with no influence from the insulation crimp.
2. The above specifications are guidelines to an optimum crimp.


Mechanical Feed Metal Strip Applicator

Tool Calibration

To recalibrate this applicator, make sure the power is completely shut off on the press.

1. The Mini-Mac applicator must be properly installed in the press.
2. Crimping dies must be properly installed in the Mini-Mac applicator.
3. The recommended method of measuring the crimp height of the conductor dies is the soft metal slug method, (See Figure 4).
4. The slug must have a diameter 0.51mm (.020") larger than the "X" No Go dimension before crimping.
5. Place the soft metal slug (solder) into the nest of the bottom die and crimp (by hand cycling the press) similar to a terminal. The crimp height can be measured with a blade type micrometer or dial caliper, (Dimension "X").
6. Adjustment of the crimp height can be accomplished by indexing the conductor cam. The letter "A" gives the loosest position and "K" gives the tightest position. A total adjustment of 0.50mm (.020") can be achieved by adjusting the conductor cam.

Note: If the crimp height is too tight on the setting "A", check the shut height of the press. See the Industrial Mini-Mac Applicator Manual Section 2.1 for adjustments.

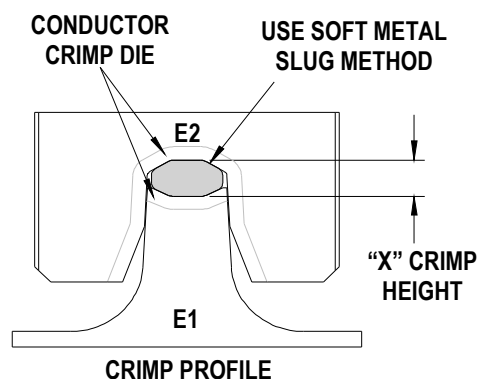

Use soft metal slug (solder) method to measure the "X" dimension. Verify tooling crimp height calibration by referring to the Go/No Go dimensions shown in the chart below.

Figure 4

Mechanical Feed Metal Strip Applicator

PARTS LIST

Mini-Mac Applicator 63881-0800				
Item	Order No	Engineering No.	Description	Quantity
Perishable Tooling				
	63881-0870	63881-0870	Tool Kit (All "Y" Items)	REF
1	63465-0012	63465-0012	Conductor Punch	1 Y
2	63464-0012	63464-0012	Conductor Anvil	1 Y
3	63463-0009	63463-0009	Insulation Punch	1 Y
4	63462-0013	63462-0013	Insulation Anvil	1 Y
5	63466-0201	63466-0201	Cut-off Plunger Rear	1 Y
6	63466-0301	63466-0301	Rear Plunger Retainer	1 Y
7	63466-0002	63466-0002	Cut-Off Blade	1 Y
Other Components				
8	63443-0021	63443-0021	Lower Tooling Key	1
9	63466-0101	63466-0101	Scrap Chute	1
10	63466-0403	63466-0403	Cut-off Plunger Striker (Rear)	1
11	63466-0921	63466-0921	Terminal Stripping Blade	1
12	63466-1054	63466-1054	•Spacer (5.40mm)	1
13	63466-1075	63466-1075	•Spacer (7.50mm)	1
14	63600-0110	63600-0110	M4 Washer, 3mm Thick	1
15	63600-1290	63600-1290	Washer	1
16	63700-0539	63700-0539	Cut-Off Plunger Spring	1
17	63801-4510	63801-4510	Terminal Guide Front	1
18	63890-0866	63890-0866	Collar-6.40 Long	1
19	63890-0867	63890-0867	Collar-7.70 Long	1
Frame				
20	63801-3201	63801-3201	Mechanical Feed Applicator Frame Head	1
21	63801-3281	63801-3281	Base	1
22	63801-4550	63801-4550	Track Assembly	1
Hardware				
23	N/A	N/A	M4 by 10 Long SHCS	2**
24	N/A	N/A	M4 by 12 Long SHCS	1**
25	N/A	N/A	M4 by 20 Long SHCS	4**
26	N/A	N/A	M4 by 40 Long SHCS	1**
27	N/A	N/A	M4 by 45 Long SHCS	1**
28	N/A	N/A	M8 by 30 Long BHCS	1**
29	N/A	N/A	3mm by 6 Long Roll Pin	1**

** Available from an industrial supply company such as MSC (1-800-645-7270).

- See spacer assembly notes on page 2.

Note: Crimp profiles used in 63881-0800 are equivalent to 19292-0002/MMZ-AA-575, 19287-0032 / ASP-AA-5QD1087, 19287-0037 / ASP-AA-5QD250, and 19287-0042 / ASP-AA-5QD250 (UL file number E79133).

Mechanical Feed Metal Strip Applicator

Assembly Drawing

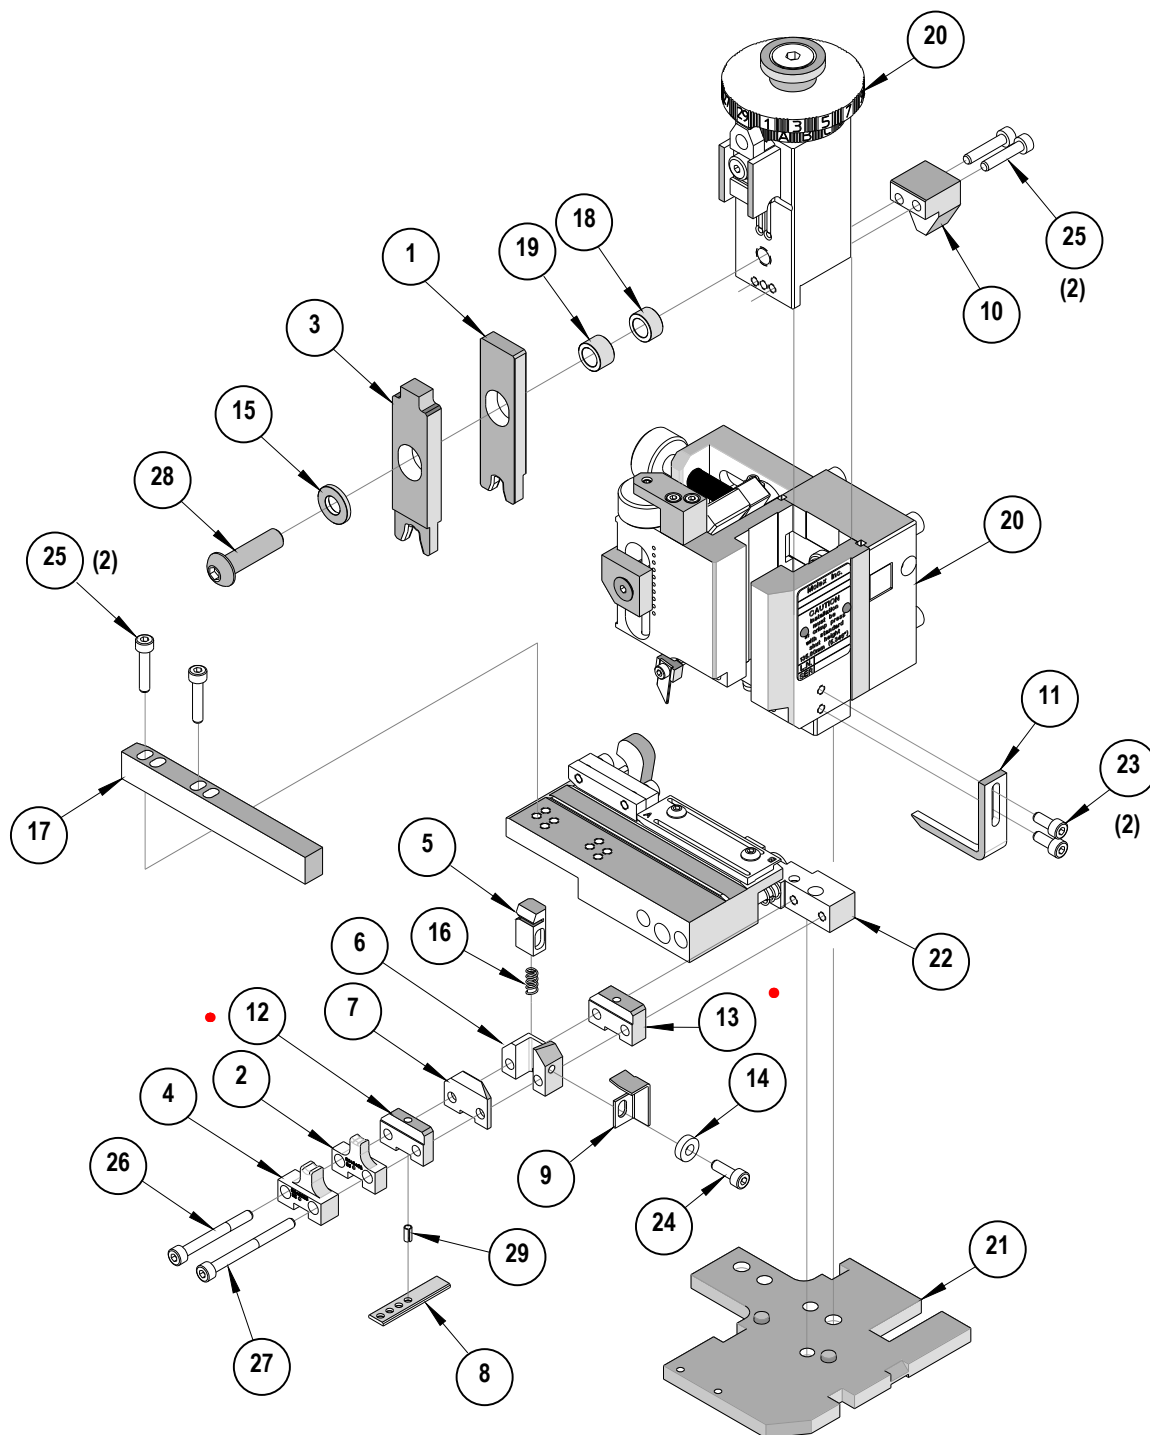


Figure 5

• See spacer assembly notes on page 2.

Mechanical Feed Metal Strip Applicator

NOTES

1. Molex recommends an extra perishable tooling kit be maintained at your facility.
2. Verify tooling alignment by manually cycling the press with applicator before crimping under power. Check that all screws are tight.
3. Slugs, terminals, dirt, and oil should be kept clear of work area.
4. Wear safety glasses at all times.
5. For recommended maintenance refer to the Mini-Mac Applicator Manual (Document no. 63880-0000).

CAUTION: This applicator should only be used in a press with a shut height of 135.80 mm (5.346"). Tooling damage could result at a lower setting.

CAUTION: To prevent injury, never operate this applicator without the guards supplied with the press or wire-processing machine in place. Reference the press or wire processing manufacturer's instruction manual.

CAUTION: Molex crimp specifications are valid only when used with Molex terminals, applicators and tooling.

Contact Information

For more information on Molex application tooling please contact Molex at 1-800-786-6539.

Visit our Web site at <http://www.molex.com>