Excellent Integrated System Limited

Stocking Distributor

Click to view price, real time Inventory, Delivery & Lifecycle Information:

TE Connectivity AMP Connectors 768347-1

For any questions, you can email us directly: sales@integrated-circuit.com






AMP* Connector-Specific Kit 768347-1 for AMP-LATCH* DIP Connectors

Instruction Sheet

408-9837 14 MAY 93 Rev A

PROPER USE GUIDELINES

Cumulative Trauma Disorders can result from the prolonged use of manually powered hand tools. AMP hand tools are intended for occasional use and low volume applications. AMP offers a wide selection of powered application equipment for extended—use, production operations.

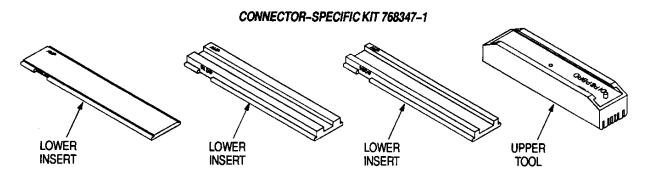

TYPICAL APPLICATIONS

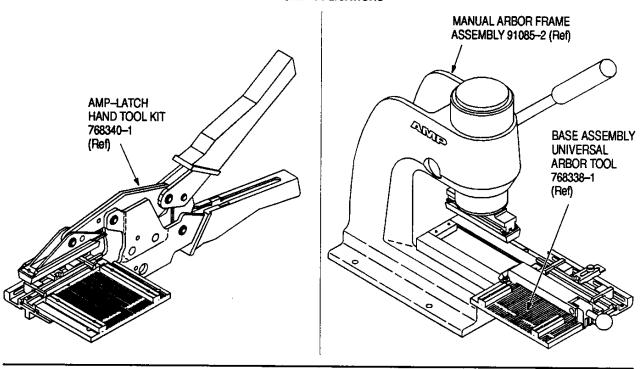


Figure 1

cad

1. INTRODUCTION

This instruction sheet describes AMP Connector– Specific Kit 768347–1, lists cable requirements, and describes installation of the connector–specific kit. (See Figure 1.)

The connector-specific kit is used with Base Assembly Universal Arbor Too! 768338-1 or

AMP-LATCH Hand Tool Kit 768340-1 (Figure 1) to terminate AMP-LATCH DIP Connectors to ribbon cable with 1.27 mm [.050-in.] centerline spacing. See Figure 2.

The Base Assembly Universal Arbor Tool is powered by either AMP Manual Arbor Frame Assembly 91085–2 or AMP Pneumatic Frame Assembly 91112–3.

AMP Incorporated, Harrisburg, PA 17105 TOOLING ASSISTANCE CENTER 1-800-722-1111 AMP FAX/PRODUCT INFO 1-800-522-6752 This AMP controlled document is subject to change. For latest revision call the AMP FAX number.

© Copyright 1993 by AMP Incorporated. All International Rights Reserved.





AMP Connector-Specific Kit 768347-1

NOTE

For information concerning AMP-LATCH DIP Connectors, refer to AMP Catalog 82012. For detailed information on other tooling components used with the Connector-Specific Kit 768347-1, refer to the following publications:

408–6732 -- Pneumatic Auto-Cycle Unit 91112–3

408-7777 --- Manual Arbor Frame Assembly 91085-2

408–9827 -- Base Assembly Universal Arbor Tool 768338-1


408-9828 -- AMP-LATCH Hand Tool Kit 768340-1

NOTE

All dimensions are in metric units [with U.S. customary units in brackets].

2. DESCRIPTION (Figure 1)

The connector–specific kit features an upper tool and three lower inserts. The upper tool applies an even force over the length of the connector during termination. Each lower insert positions the connector on the tooling assembly. Each component is marked "AMP DIP."

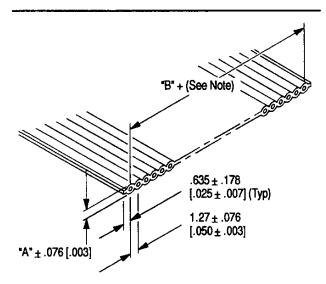

NOTEACCUMULATIVE TOLERANCE FOR CABLE CONDUCTORS 1 THROUGH 34 IS + .254 [.010] AND THROUGH 60 IS + .38 [.015].

CONDUCTOR		DIMENSION	
SIZE (AWG)	. TYPE	"A"	"B"
26	Stranded or Solid	0.889 mm	1.27 mm [.050 lN.] X (Total No. of
28	Stranded or Solid	[.0351N.]	Conductors
30	Solid	•	Minus One)

Figure 2

cad 9831

3. CABLE REQUIREMENTS

The connector–specific kit will terminate AMP–LATCH DIP Connectors with 1.27 mm [.050–in.] centerline spacing to ribbon cable with No. 26 AWG solid or stranded conductors, No. 28 AWG solid or stranded conductors, or No. 30 AWG solid conductors. Refer to Figure 2 for the recommended cable dimensions.

CAUTION

The cable must be cut 90° to the edge of the cable; otherwise an improper termination will result. We suggest you use a guillotine-type cable cutter, such as the Carpenter Model 95 which can be purchased from:

Carpenter Manufacturing Co., Inc. Fairgrounds Drive Manlius. N.Y. 13207

AMP-LATCH HAND TOOL KIT 768340-1 (Ref) (Includes AMP-LATCH Hand Tool Subassembly 768942-1 and Base Assembly Universal Hand Tool 768339-1.

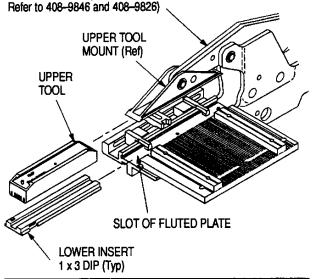


Figure 3

cad


4. CONNECTOR-SPECIFIC KIT INSTALLATION (Figures 3 and 4)

NOTE

For hand tool applications, mount the hand tool onto a suitable work surface, whenever possible, before terminating the connectors. Refer to the bench-clamping instructions in instruction sheet 408-9828, packaged with the AMP-LATCH Hand Tool Kit.

- 1. Slide the upper tool onto the upper tool mount.
- 2. Select the lower insert, according to the style connector being terminated, and slide the insert into the slot of the fluted plate.

This completes the installation procedure.

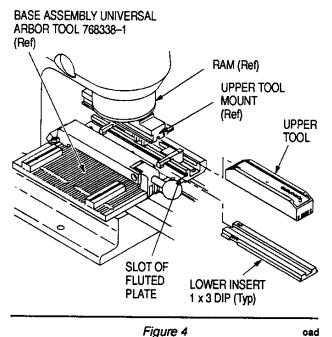

NOTE

For information concerning termination procedures, refer to 408–9828 packaged with the AMP-LATCH Hand Tool Kit, and 408–9827 packaged with the Base Assembly Universal Arbor Tool.


5. CONNECTOR-SPECIFIC KIT INSPECTION

Connector–Specific Kit 768347–1 has been inspected and should be verified with the information provided in Figure 5. It is recommended that the connector–specific kit be inspected immediately upon its arrival at your facility (and at regularly scheduled intervals) to ensure that the kit components have not been damaged during handling.

For additional information concerning connector– specific kits, contact your local AMP representative or:

CUSTOMER SERVICE (38-35) AMP INCORPORATED P.O. BOX 3608 HARRISBURG, PA 17105-3608

CONNECTOR-SPECIFIC KIT 768347-1

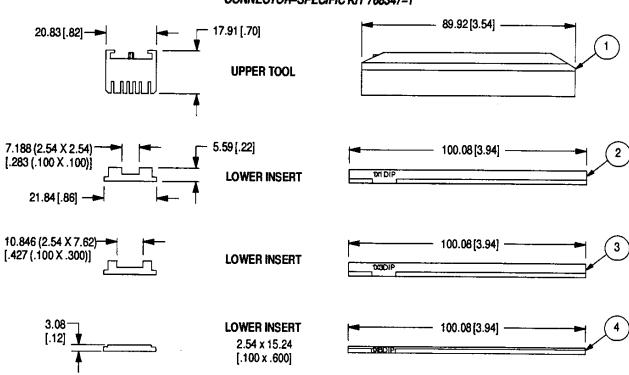

COMPONENT LIST				
ITEM NO.	PART NUMBER	DESCRIPTION	QTY	
1	543274-5	Upper Tool	1	
2	5432755	Lower Insert	1	
3	543275-6	Lower Insert	1	
4	543275-7	Lower Insert	1	

Figure 5

cad