Excellent Integrated System Limited

Stocking Distributor

Click to view price, real time Inventory, Delivery & Lifecycle Information:

Logical Systems
PA44QF03-44QF

For any questions, you can email us directly: sales@integrated-circuit.com



Distributor of Logical Systems: Excellent Integrated System Limited

Datasheet of PA44QF03-44QF - ADAPTER 44-TQFP TO 44-QFP

Contact us: sales@integrated-circuit.com Website: www.integrated-circuit.com


PA44QFxxx-44QF Data Sheet

44 pin QFP socket/44 pin QFP plug

Supported Device/Footprints

These adapters accept 44 pin QFP devices and have a removable 44 pin QFP solder-down plug. This allows QFP device to be inserted into and removed from a prototype easily.

The QFP socket accepts packages with the dimension sets listed below:




Socket	Body	Knee	Tip	Pitch
44QF-03	10.0 mm typ	11 mm typ	12 mm typ	0.8 mm
PQFP		11.3 mm max	12.8 mm max	
44QF-14C PQFP	10.0 mm typ	12.8 mm typ	13.9 mm typ	0.8 mm
44QF-16 PQFP	10.0 mm typ	11.6 mm typ	13.2 mm typ	0.8 mm


The QFP plug will fit most 44 pin. 0.8mm pitch, QFP land patterns. Usually the pads extend from the body past the tip of the device leads. This plug will fit on pads that have a minimum span of 10.0mm or less and a maximum span of 12.0mm or more.

Inner pad span	Outer pad span	
10.0mm or less	12.0mm or more	


The QFP Plug's leads are dimensioned as follows.

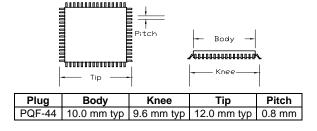

Adapter Dimensions

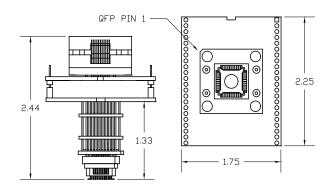

PA44QF03-44QF

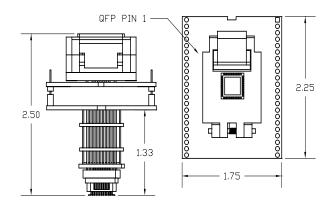

PA44QF16-44QF

Adapter Construction

The adapter is made up of 4 sub-assemblies. They assemble via connectors making the adapter modular. This way the sub-assemblies can be replaced easily.

When disassembling the adapter take care not to bend the pins. When reassembling the adapter note the pin 1 indicators to align the parts correctly.

The following chart shows the adapters described by this datasheet and their subassemblies.

Adapter	Socket	Тор	Bottom	QFP
		Board	Board	Plug
PA44QF03-44QF	44QF-03	44QF-03-TP	44-PLUG-Q	PQF-44
PA44QF14C-44QF	44QF-14C	44QF-16-TP	44-PLUG-Q	PQF-44
PA44QF16-44QF	44QF-16	44QF-16-TP	44-PLUG-Q	PQF-44

Test Socket

LSC #	Style	Mfgr/Pn
44QF-03	Open Top	Enplas OTQ-44-0.8-03
44QF-14C	Lidded ZIF	Enplas FPQ-44-0.8-14C
44QF-16	Lidded ZIF	Enplas FPQ-44-0.8-16

QFP Plug

Solders to the QFP land pattern on the prototype. Additional QFP Plugs can be purchased separately.

Adapter Wiring

The adapter is wired 1 to 1. QFP socket pin 1 connects to QFP plug pin 1. Pin 2 to pin 2 and so on around the package.



Logical Systems Corporation
PO Box 6184, Syracuse, NY 13217-6184 USA
Tel (315) 478-0722, FAX (315) 479-6753
E M S www.logicalsys.com, Email: info@logicalsys.com

PA44QFxxx-44QF Data Sheet Doc: 44QXQF.DOC Rev 04/05/04 Page 1 of 1