

# **Excellent Integrated System Limited**

Stocking Distributor

Click to view price, real time Inventory, Delivery & Lifecycle Information:

Molex Connector Corporation 0638585070

For any questions, you can email us directly: <u>sales@integrated-circuit.com</u>



**Distributor of Molex Connector Corporation: Excellent Integrated System Limited** Datasheet of 0638585070 - TOOL KIT Contact us: sales@integrated-circuit.com Website: www.integrated-circuit.com

T2 Terminator



## T2 Terminator Tooling Application Tooling Specification Sheet Order No. 63858-5000

#### **FEATURES**


- This terminator can be installed in the TM42 and the TM40 press or Base Unit adapter for 3BF press
- It is ideally suited for mid-volume bench operations
- Quick punch removal with the push of a button for fast and easy tooling change
- Track adjustment capabilities in the T2 Terminators for improved control of the bell mouth size and cutoff tab length
- T2 Terminator has standardized tooling with the Molex FineAdjust Applicator which will reduce your inventory requirements

#### **SCOPE**

Products: 2.50mm (.098") Pitch Board-In Terminal 22-28 AWG

Terminal Series No.	Wi	re Size	Insulation	Diameter	Strip Length			
Terminur Series No.	AWG	mm <sup>2</sup>	mm	ln.	mm	ln.		
35047	22-28	0.08-0.32	1.15-1.90	.045075	3.00-3.50	.118138		
Note: Terminal will accommodate UL1007 and UL1569 Wires								
Terminals must be wound for a left to right feed applicator. Terminals 35047-9802 are wound in the opposite direction so they must be rewound to run through this applicator.								

#### **DEFINITION OF TERMS**

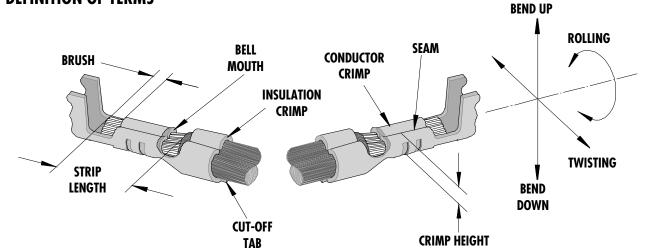

The above terminal drawing is a generic terminal representation. It is not an image of any terminal listed in the scope.



### **CRIMP SPECIFICATION**

	Terminal Series No.	Bell n	nouth	Cut-off 1	ab Max.	Conductor Brush		
		mm	ln.	mm	In.	mm	In.	
	35047	0.20-0.50	.008020	0.30	.012	0.00-1.40	.000055	

	Bend up Bend down Degree		Twist Roll Degree		Punch Width (Ref)			ef)	<b>Seam</b> Seam shall not be	
<b>Terminal Series No.</b>					Conductor		Insulation			
					mm	In	mm	In	open and no wire allowed	
35047	3	3	3	3	1.40	.055	1.90	.075	out of the crimping area	

After crimping, the crimp profiles should measure the following:

Terminal Series No.	Wire Size		Conductor					
	wire	SIZe	Crimp	Height	Crimp Width (Ref)			
	AWG	mm <sup>2</sup>	mm	In.	mm	In.		
35047	22	0.32	0.82-0.87	.032034	1.40 +/- 0.10	.055 +/004		
35047	24	0.20	0.75-0.80	.029031	1.40 +/- 0.10	.055 +/004		
35047	26	0.13	0.70-0.75	.027029	1.40 +/- 0.10	.055 +/004		
35047	28	0.08	0.66-0.71	.026028	1.40 +/- 0.10	.055 +/004		

	Wire	Sizo			nsulation		Dull For	o Min
Terminal Series No.	WH C	JIZE	<b>Crimp He</b>	ight (Ref)	Crimp Wi	Pull Force Min.		
	AWG	mm <sup>2</sup>	mm	ln.	mm	In.	N	Lb.
35047	22	0.32	1.60	.063	1.90 +/- 0.10	.075 +/004	39.1	8.8
35047	24	0.20	1.50	.059	1.90 +/- 0.10	.075 +/004	29.3	6.6
35047	26	0.13	1.45	.057	1.90 +/- 0.10	.075 +/004	19.6	4.4
35047	28	0.08	1.40	.055	1.90 +/- 0.10	.075 +/004	9.8	2.2

- \* <u>Tool Qualification Notes:</u>
- 1. This Terminator was qualified to the above specifications with UL1007 wire.
- 2. Pull Force should be measured with no influence from the insulation crimp.
- 3. The above specifications are guidelines to an optimum crimp.




### PARTS LIST

T-2 Terminator 63858-5000										
ltem										
	Perishable Tooling									
	63858-5070	63858-5070	Tool Kit (All "Y" Items)	REF						
1	63444-1407	63444-1407	Conductor Punch	1 Y						
2	63445-1430	63445-1430	Conductor Anvil	1 Y						
3	63446-1906	63446-1906	Insulation Punch	1 Y						
4	63445-1906	63445-1906	Insulation Anvil	1 Y						
5	63443-0002	63443-0002	Cut-Off Plunger Front	1 Y						
6	63443-0012	63443-0012	Plunger Retainer Front	1 Y						
		Other Com	ponents							
7	11-24-1067	4996-4	Cut-off Plunger Spring	1						
8	11-40-4039	8302-5	Plunger Striker Front	1						
9	63443-0021	63443-0021	Lower Tooling Key	1						
10	63443-6003	63443-6003	Rear Cover	1						
11	11-18-4083	60707-8	Front Cover	1						
12	63443-2430	63443-2430	Anvil Mount	1						
13	63443-4005	63443-4005	Wire Stop	1						
14	63443-0009	63443-0009	Scrap Chute Front	1						
	Frame									
15	63800-8500	63800-8500	T2 Terminator	1						
		Hardw	are							
16	N/A	N/A	M3 by 6Lg. SHCS	2**						
17	N/A	N/A	M4 by 6Lg. SHCS	]**						
18	N/A	N/A	M4 by 12Lg. BHCS	2**						
19	N/A	N/A	M4 by 16Lg SHCS	]**						
20	N/A	N/A	M4 by 20Lg. SHCS	]**						
21	N/A	N/A	M4 by 50Lg. SHCS	]**						
22	N/A	N/A	3MM by 6Lg. Roll Pin	]**						
23	N/A	N/A	#10-32 by 3/8"Lg. BHCS	]**						
** Av	/ailable from an	industrial supply com	ipany such as MSC (1-800-64	45-7270).						



Distributor of Molex Connector Corporation: Excellent Integrated System Limited Datasheet of 0638585070 - TOOL KIT Contact us: sales@integrated-circuit.com Website: www.integrated-circuit.com

**T2** Terminator

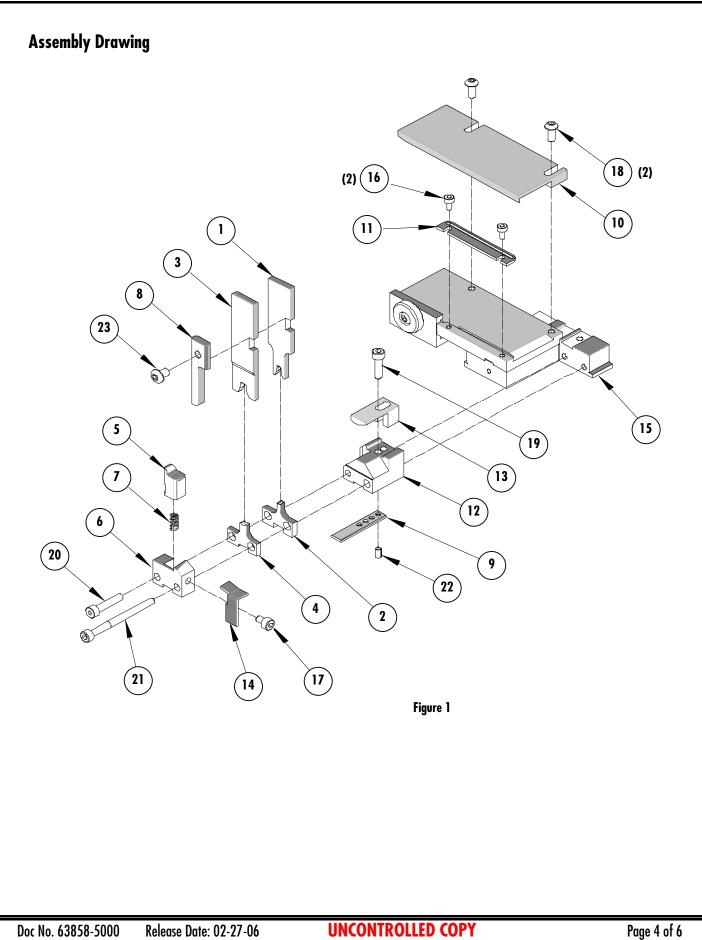




### NOTES

#### Depending on the press vintage a feed finger assembly is supplied with the T2 Terminator.

- 1. To remove the existing feed finger assembly loosens the M4 x 10 mm set screw in the feed lever.
- 2. Select T2 Feed finger assembly from Terminator box.
- 3. Insert a screwdriver into the slot behind the feed lever and force the feed arm spring to the right.
- 4. Slide the T2 feed finger shaft for TM42 (11-40-5307) or (11-40-0123) for TM40 /Base Unit into the feed lever and to the left of the feed arm spring.
- 5. Release the feed arm spring.
- 6. Position feed finger for selected product. (Refer to Figure 5.1 in the T2 Manual).

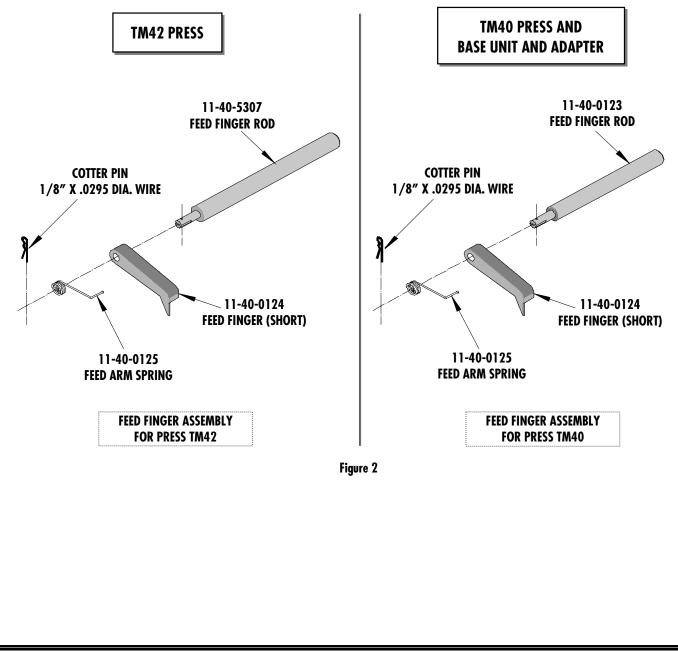



#### NOTES

- 1. Molex recommends an extra perishable tooling kit be maintained at your facility.
- 2. Verify tooling alignment by manually cycling the press before crimping under power. Check that all screws are tight.
- 3. Slugs, Terminals, Dirt and Oil should be kept clear of work area.
- 4. This Terminator should be only used in a Molex TM42, TM40, or 3BF Press with a Base Unit adaptor.
- 5. Wear safety glasses at all times.
- 6. For recommended maintenance refer to the TM40, TM42 Manual.

**CAUTION**: To prevent injury never operate this Terminator without the guards supplied with the press or in place. Reference the TM42 press manufacturer's instruction manual.

**CAUTION**: Molex crimp specifications are valid only when used with Molex terminals, applicators and tooling.

#### **Molex Application Tooling Group**

2200 Wellington Court Lisle, IL 60532 Tel: (630) 969-4550 Fax: (630) 505-0049

Visit our Web site at http://www.molex.com