

Excellent Integrated System Limited

Stocking Distributor

Click to view price, real time Inventory, Delivery & Lifecycle Information:

[Thomas Research Products](#)
[SD2](#)

For any questions, you can email us directly:

sales@integrated-circuit.com



SD2 Step-Dimming Module

Bi-Level dimming control module
for use with 0-10V dimmable LED Drivers

Electrical Specifications

Input Voltage Range:	100-132 Vac Nom.
Frequency:	50/60 Hz Nom. (47-63 Hz Min/Max)
Max Pass Current:	1.0A @ 120Vac Input
Max LED Driver Power:	100W
Max Insertion Loss:	<1.5W @ 100W LED Driver
Class 2 Control Output:	0-10V (Current Sinking only, 50mA max)
Warranty:	5 years


Environmental Specifications

Storage Temperature:	-40°C to +85°C
Max Case Temp:	75°C
Min Operating Temp:	-40°C
Humidity:	5% to 95%
Lifetime:	1,000,000 Switching Cycles



The SD2 works with two standard wall switches to provide quick switching between 100% and 50% light output from LED luminaires.

- Works with 0-10V dimmable LED drivers
- Eliminates need for expensive dimmer unit
- Works with occupancy sensors
- Class 2 Output

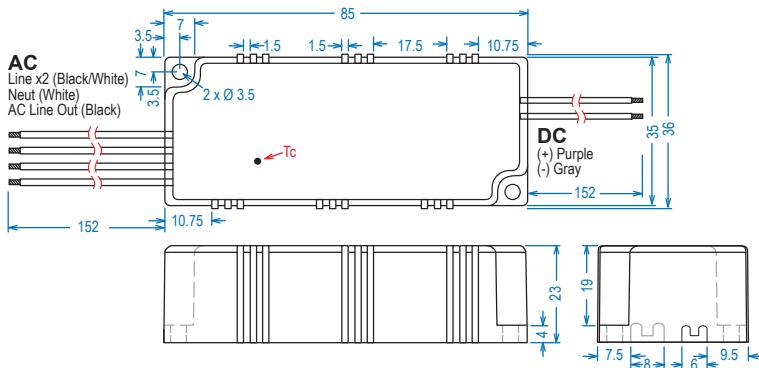

For wiring diagrams, see next page

SD2-120 Step-Dimming Operation

Switch Position	Driver Current Output
S1 Closed	100%
S2 Open	<50%
S1 Open	<50%
S2 Closed	0%

Contact TRP for custom output variants!



NOTES:

1. Compatibility with 0-10V dimmable drivers manufactured by companies other than Thomas Research Products cannot be assured. Please contact your sales representative for a list of compatible drivers.
2. This device is designed to operate with standard wallbox switches only.
3. UL requires that these modules be installed within the luminaire enclosure.

Specifications subject to change without notice.

Rev 4-18-16



SD2 Step-Dimming Module

SSL Solutions Faster Than The Speed Of Light®


Pg 2 of 2

Wiring Diagrams


Standard Wiring:

Note:

Lead placement on wiring diagram is optimized for clarity, and not intended to reflect actual lead exit locations on SD case.

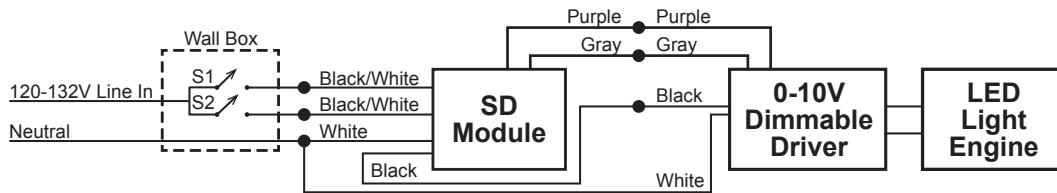

Wiring with Occupancy Sensor:

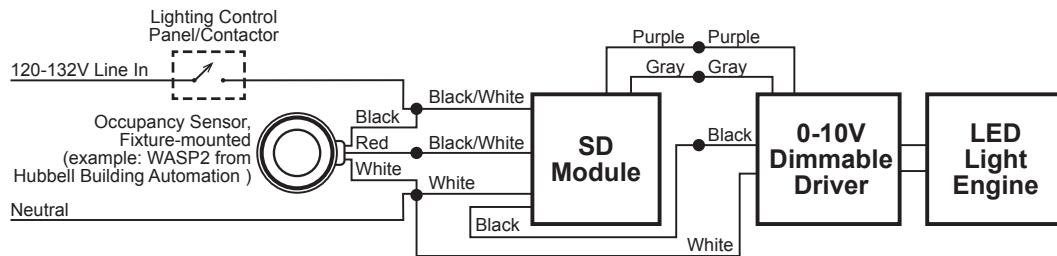

Note:

Incoming power from branch must be on same phase. Do not use with multiple phases.